

# Table of Contents

|                                                                |    |
|----------------------------------------------------------------|----|
| <b>How to replace the Belt Tensioner Left (CORE One)</b> ..... | 3  |
| Step 1 - Introduction .....                                    | 4  |
| Step 2 - Tools necessary for this guide .....                  | 5  |
| Step 3 - Printer Preparation .....                             | 5  |
| Step 4 - Side Cover Removal .....                              | 6  |
| Step 5 - Side Panel Removal .....                              | 6  |
| Step 6 - Front Panel Disengage .....                           | 7  |
| Step 7 - Corner Profile Removal (Part 1) .....                 | 8  |
| Step 8 - Corner Profile Removal (Part 2) .....                 | 9  |
| Step 9 - Door Sensor Removal .....                             | 10 |
| Step 10 - Belt-tensioner-pulley Removal .....                  | 11 |
| Step 11 - Pulley Removal .....                                 | 11 |
| Step 12 - Belt-tensioner-left Removal .....                    | 12 |
| Step 13 - Tensioner Preparation .....                          | 13 |
| Step 14 - Belt-tensioner-left Installation .....               | 14 |
| Step 15 - Belt-tensioner-left Installation 2 .....             | 14 |
| Step 16 - Sensor Installation .....                            | 15 |
| Step 17 - Tensioning Bolt Lubrication .....                    | 16 |
| Step 18 - Tensioner Preparation .....                          | 17 |
| Step 19 - Belt-tensioner-pulley Assembly .....                 | 18 |
| Step 20 - Belt-tensioner-pulley Installation .....             | 19 |
| Step 21 - Corner Profile Installaton .....                     | 20 |
| Step 22 - Corner Profile Attachment .....                      | 21 |
| Step 23 - Front Panel Attachment .....                         | 22 |
| Step 24 - Sensor Initial Calibration .....                     | 23 |
| Step 25 - Side Cover Installation .....                        | 24 |
| Step 26 - Door Sensor Test .....                               | 25 |
| Step 27 - Belt Tensioning .....                                | 25 |
| Step 28 - Finish .....                                         | 26 |



# How to replace the Belt Tensioner Left (CORE One)



[help.prusa3d.com/g948782](https://help.prusa3d.com/g948782)

Scan the QR code to  
display the latest  
version of this  
chapter.



## STEP 1 Introduction



- This guide will take you through the **Belt-tensioner-left** and the **Belt-tensioner-pulley** assemblies replacement on your Prusa **CORE One**.

- All necessary parts are available in our eshop [prusa3d.com](https://prusa3d.com).



Note that you have to be logged in to have access to the spare parts section.



**Warning: You will be handling metal sheets in this guide. Be careful!**

## STEP 2 Tools necessary for this guide



### ● Please prepare tools for this guide:



- 2mm Allen key
- 2.5mm Allen key
- T10 Torx key
- Flush cutters are recommended as an optional tool.
- Prusa lubricant or another suitable grease (available in e-shop)

## STEP 3 Printer Preparation



- On the printer, visit the menu **Control** and trigger the **Auto Home**.
- Turn the printer off using the switch on the back.
- Disconnect the printer from power.

## STEP 4 Side Cover Removal

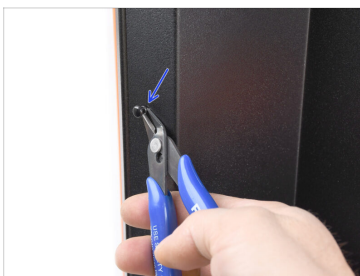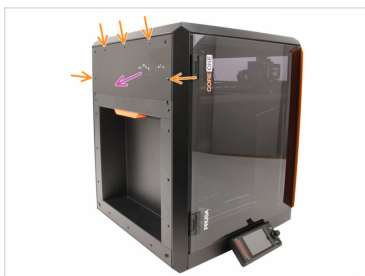

- Remove the five Nylon rivets holding the plastic side cover.
- We recommend using flush cutters to lift the top part of the rivet, unlocking it. Then, remove the bottom part of the rivet.
- Remove the plastic side cover.


---

## STEP 5 Side Panel Removal



- Remove the marked Nylon rivets holding the Side Sheet Metal Panel.
- Remove the panel.

## STEP 6 Front Panel Disengage

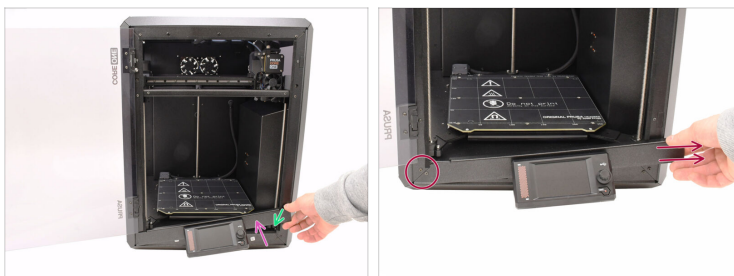


- ✦ Lift the front sheet metal panel with the LCD upward on the right side to unhook it from the corner profile.
- ⓘ The panel is held by magnets.
- ✦ Once unhooked from the corner profile, pull the panel forward slightly to keep it unhooked.
- ⚠ Be very careful when moving the front panel assembly, as there are cables connected to the LCD. Ensure you do not disconnect or damage them!
- ✦ Move the front panel assembly to the right. Move it just so that you gain access to the two screws on the left.

## STEP 7 Corner Profile Removal (Part 1)




- On the side of the printer, remove the three screws holding the corner profile.
- From the front of the printer, **remove only the two marked screws** securing the corner profile.

## STEP 8 Corner Profile Removal (Part 2)

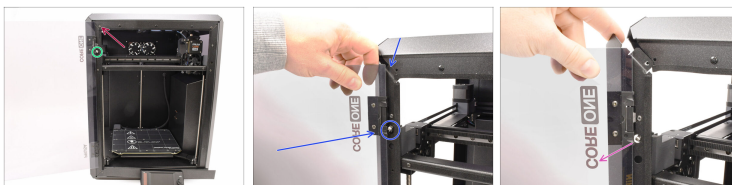


- Leave the top screw holding the corner profile in place for now.
- Notice the door switch lever poking through an opening in the profile.
- Hold the printer's door with one hand while removing the top screw holding the profile. After removing the screw, carefully unhook the corner profile from the top part, **ensuring the door switch is not damaged during the process.**
- Then, remove the corner profile along with the door, ensuring the lever of the door switch is not damaged.

## STEP 9 Door Sensor Removal

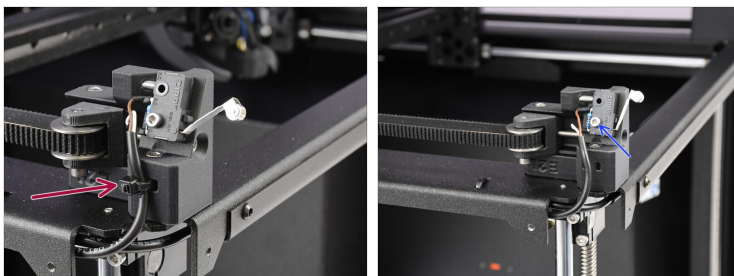

- Carefully cut off the zip-tie holding the door sensor cable. Do not damage the cable!
- Remove the M2.5x10 screw and the door sensor.
- ① You can leave the door sensor hanging by the cable for now, but since it is a precise mechanical component, handle it carefully to avoid damage.

## STEP 10 Belt-tensioner-pulley Removal

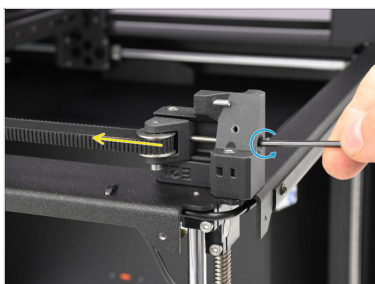

- Fully loosen the belt tensioning screw.
- Disengage the belt-tensioner-pulley assembly from the tensioner-left.
- ⓘ If the pulley assembly can't be removed this way, skip this step and disassemble it after removing the entire tensioner assembly.

## STEP 11 Pulley Removal




- On the pulley assembly, remove the M3x18 screw.
- The plastic part and the GT2-20 Idler Pulley will separate.
- Remove the GT2-20 Idler Pulley from the belt.

## STEP 12 Belt-tensioner-left Removal



- Remove the two M3x30 screws holding the tensioner-left.
- Undo the M3X18 screw and remove the plastic part from the printer.
- Remove the M3x12 door sensor tensioning screw from the plastic part.


## STEP 13 Tensioner Preparation

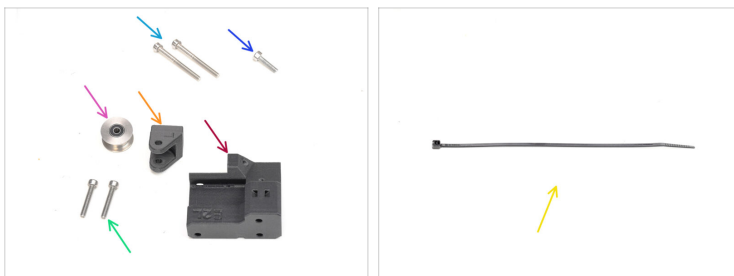

■ **For the following steps, prepare:**

- M3x30 screw (2x)
- M3x12 screw (1x)
- GT2-20 pulley (1x)
- Belt-tensioner-puley (1x)
- Belt-tensioner-left (1x)
- M3x18 screw (1x)
- Zip-tie (1x)

## STEP 14 Belt-tensioner-left Installation

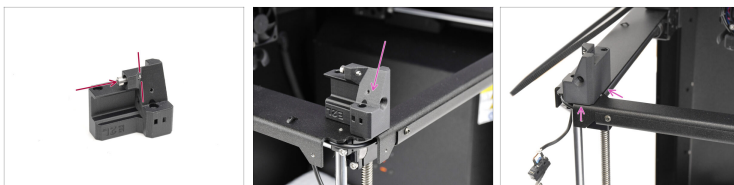

- Install the M3x12 door sensor tensioning screw into the plastic part and tighten it until the tip just begins to protrude from the other side.
- Add the new belt-tensioner-left part into the printer. Align it with the Core-XY assembly.

---

## STEP 15 Belt-tensioner-left Installation 2




- Fix the part in place using the two M3x30 screws.
- Continue with the M3x18 screw into the corner.

## STEP 16 Sensor Installation



- Add the door sensor to the tensioner-left part. The roller switch must be pointing up and towards the front of the printer.
- Secure the sensor with the M2.5x10 screw, tightening only until snug so the sensor can still pivot on the screw.
- Move the sensor body towards the back of the printer.
  - ⓘ This is the starting position; the sensor will be calibrated and adjusted in the following steps.
- Secure the sensor cable with a zip tie, leaving some slack near the sensor to avoid strain.
- Carefully trim the excess zip tie without cutting the cable.

## STEP 17 Tensioning Bolt Lubrication

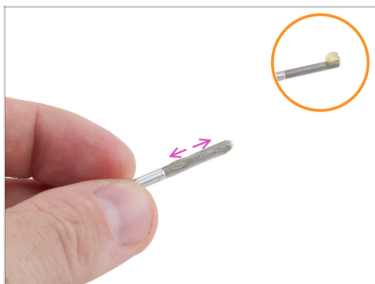

- Before re-installing the M3x30 **belt tensioning bolt**, it should be lubricated to ensure smooth belt adjustment and to prevent the tensioner from seizing.
- Apply a small amount of Prusa lubricant to the tip of the M3x30 screw.
- Spread the lubricant evenly around the entire thread.

## STEP 18 Tensioner Preparation



- Insert the M3x30 tensioning bolt into the belt-tensioner-left part on the printer.
- Note that the Belt-tensioner-pulley part has "R" and "L" markings; for use on the left side, ensure the "L" is facing up.
- Insert the M3nS nut into the corresponding opening in the plastic part and push it all the way in.

## STEP 19 Belt-tensioner-pulley Assembly



- Hook the Idler Pulley by the belt on the inside of the printer.

 **Make sure the belt is straight and not twisted!**


- Attach the Belt-tensioner-pulley plastic part onto the pulley itself.

 **Make sure the part with the nut is pointing towards the center of the printer!!**

- Align both parts and fix them together using the M3x18 screw.

 The "L" marking should be visible on top.

## STEP 20 Belt-tensioner-pulley Installation

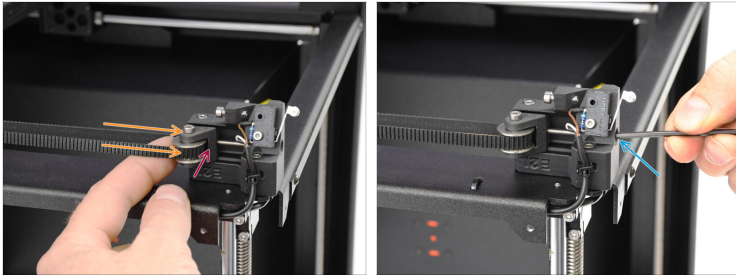


- ✶ Push the assembly into the belt-tensioner plastic part in the printer.
- ✶ The opening with the nut on the pulley assembly should align with the tensioning bolt.
- ✶ Tighten the M3x30 tensioning bolt to fix the assembly in place.



Do not tighten the screw fully yet.

## STEP 21 Corner Profile Installation

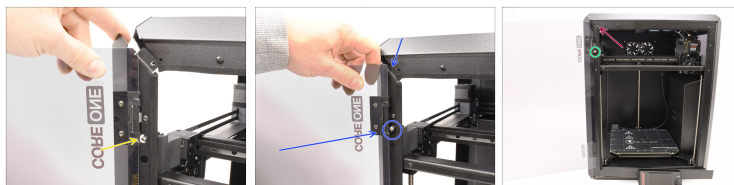

- Now, reattach the corner profile with the door.
- ⚠ We need to align the profile without damaging the door sensor lever.
- First, position the tabs with the threaded openings **behind** the top profiles on both the front as well as on the side. While moving the profile, keep a close eye on the door switch!!
- Fix the profile using the top M3x4bT screw only, for now.
- Push the switch lever to verify if it fits the opening and clicks correctly, when pressed.

## STEP 22 Corner Profile Attachment




- Fix the corner profile in place using the three M3x4bT screws on the left side.
- ⚠ Ensure the tab on top of the corner profile is positioned behind the top part of the printer's frame, as seen in the picture.
- Fix the corner profile using two M3x4bT screws on the front.

## STEP 23 Front Panel Attachment



- Move the front panel to the left, until it engages into the corner profile.
- ⚠ **There are cables connected to the LCD. Ensure you do not disconnect or damage them!**
- With the right side of the panel lifted, push it toward the printer until it is flush with the front of the printer.
- Then, move the right side of the panel down to engage it into the corner profile on the right side.
- Align the front panel with the printer's frame.

## STEP 24 Sensor Initial Calibration

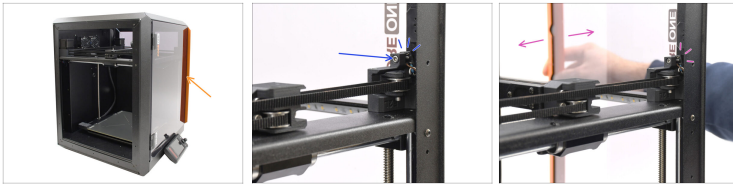


- 🟡 Close the printer's door.
  - ⚠️ When closing the door, the sensor should make an audible click, indicating it has been activated.
- 🟢 If the sensor does not click, start tightening the calibration screw slowly, until the sensor clicks.
- 🟣 Test the sensor by opening and closing the door. It should click each time the door closes.

## STEP 25 Side Cover Installation



- Add the side sheet metal panel to the printer and align it with the opening.
- Secure the panel in place with 11 Nylon rivets in the marked spots.
- Add the plastic cover onto the top part and align it with the opening.
- Fix it in place using 5 Nylon rivets.

## STEP 26 Door Sensor Test

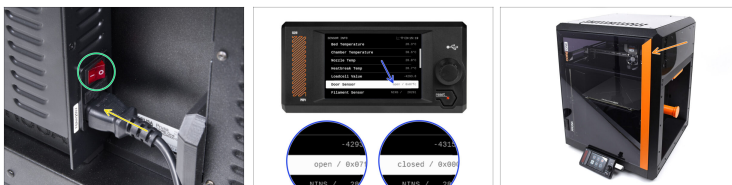


- ✦ Connect the printer to power.
- ✦ Turn the printer on using the switch on the back.
- ✦ On the printer's display, navigate to the menu **Info > Sensor Info > Door Sensor**
- ✦ Repeatedly open and close the printer's door and check if the reading on the display changes accordingly between the **open** and **closed** states.

## STEP 27 Belt Tensioning



- ✦ Visit the [Adjusting belt tension](#) article and tighten both the belts to the correct tension.

## STEP 28 Finish

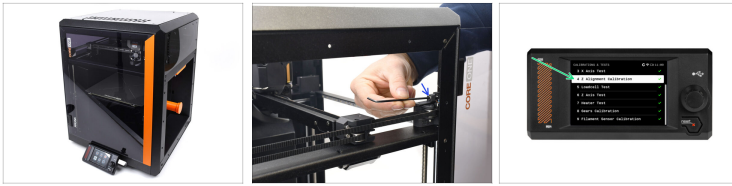

- Congratulations. Your left belt tensioning assembly has been successfully replaced.
- If further adjustment of the door sensor is needed, you can access the door sensor calibration screw from inside the printer.
- To finish the repair, we recommend to visit the menu **Control -> Calibrations & Tests** and run the Selftest.

[illegible]

---

---

---

---

---

---

---

---

---

[illegible]

---

---

---

---

---

---

---

---

---

[illegible]

---

---

---

---

---

---

---

---

---