


# Table of Contents

|   |          |
|---|----------|
| <b>Multiplexer .....</b>                      | <b>3</b> |
| Step 1 - Remove Festo fittings .....          | 4        |
| Step 2 - Check smooth entry of filament ..... | 4        |
| Step 3 - PTFE tube entry .....                | 5        |



# Multiplexer

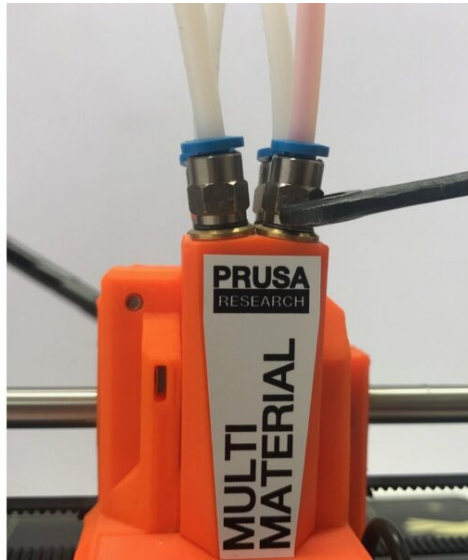


[help.prusa3d.com/g108976](https://help.prusa3d.com/g108976)

Scan the QR code to display the latest version of this chapter.



---

## STEP 1 Remove Festo fittings

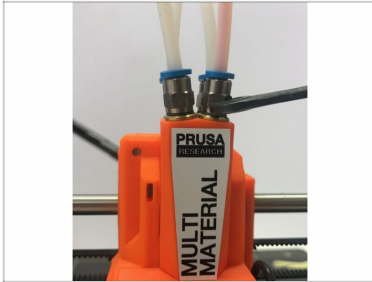

- ◆ Remove Festo fittings from multiplexer.
- ⓘ Use the 8mm side of the wrench, which is part of the upgrade kit.


---

## STEP 2 Check smooth entry of filament



- ◆ Using piece of filament make sure filament can pass into the PTFE tube without any resistance.
- ⓘ You should be able to freely insert at least 60 mm of filament.
- ◆ Check all 4 entries.

### STEP 3 PTFE tube entry

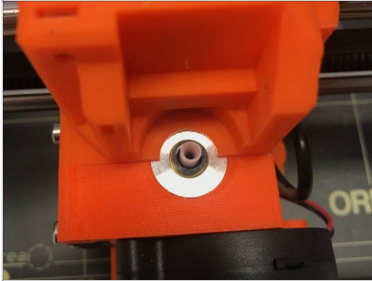

- ◆ Check entry of PTFE tube, tube must be without any damage and entry side must have tapered entry.



---

---

---

---

---

---

---

---

---

---



---

---

---

---

---

---

---

---

---

---



---

---

---

---

---

---

---

---

---

---

