

# Obsah

<b>Colour bleeding</b> .....	3
Krok 1 - Issue description .....	4
Krok 2 - Fix (newer version) .....	5
Krok 3 - Fix (older version) .....	6



# Colour bleeding



[help.prusa3d.com/g108249](https://help.prusa3d.com/g108249)

Naskenujte QR kód  
pro nejnovější verzi  
kapitoly.




## KROK 1 Issue description



- ① Tato příručka je zastaralá. Další informace o tomto tématu naleznete na stránce Objemy čištění (MMU).
- ◆ Issue is well known that it leaves traces of previously used colour in each layer as you can see in the picture.
- ① For some filaments or color combinations ( such as black color together with white color ) additional wipe area might be needed. The default value works with most materials and color combinations.



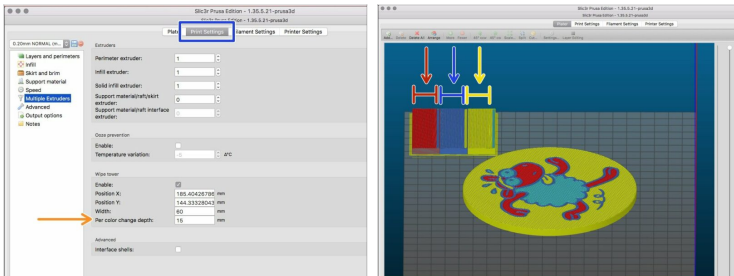


## KROK 2 Fix (newer version)



- i** Pro tento krok potřebujete Slic3r PE 1.35.1 nebo novější. Software je součástí balíčku ovladačů [prusa3d.com/drivers/](http://prusa3d.com/drivers/)
- 🟦** Open Slic3r PE with your model and switch to tab **"Print Settings"**.
- 🟠** Increase the value **"Per color change depth"** by few millimeters.
- 🟢** Process the G-code again and save it on your SD Card.
- i** Please keep in mind that increasing wipe width causes longer print times and higher material consumption.

## KROK 3 Fix (older version)



-  This step is no longer needed if you have installed Slic3r PE 1.35.1 or newer.
-  Turn on "Advanced mode" by checking highlighted box.
-  Increase "Width of wipe" by few millimeters.
-  Process the G-code again.
-  Please keep in mind that increasing wipe width causes longer print times and higher material consumption.



---

---

---

---

---

---

---

---

---

---



---

---

---

---

---

---

---

---

---

---



---

---

---

---

---

---

---

---

---

---