

Table of Contents

1. Introduction	5
Step 1 - General information	6
Step 2 - How to navigate through the manual	6
Step 3 - What awaits you during the unpacking	7
Step 4 - Tools in the package	8
Step 5 - Labels guide	8
Step 6 - Cheatsheet	9
Step 7 - Prusa nextruder sock	9
Step 8 - CAUTION: Lubricant Handling	10
Step 9 - View high resolution images	10
Step 10 - We are here for you!	11
2. Printer unboxing	12
Step 1 - Introduction	13
Step 2 - Opening the package	13
Step 3 - Opening the package	14
Step 4 - Removing the inserts	14
Step 5 - Removing the inserts	15
Step 6 - Removing the inserts	15
Step 7 - Unpacking the printer	16
Step 8 - Printer is ready for setup	16
3. Printer set up	17
Step 1 - Tools necessary for this chapter	18
Step 2 - Injection molded xLCD: parts preparation	18
Step 3 - Injection molded xLCD: xLCD cables	19
Step 4 - Injection molded xLCD: mounting the xLCD	19
Step 5 - Printed xLCD: parts preparation	20
Step 6 - Printed xLCD assembly versions	20
Step 7 - Version A: installing the xLCD	21
Step 8 - Version B: installing the xLCD	21
Step 9 - Mounting the xLCD	22
Step 10 - Preparing the printer	22
Step 11 - Nextruder assembly: parts preparation	23
Step 12 - Nozzle seal versions	23
Step 13 - Nozzle seal not pre-installed: nextruder dock preparation	24
Step 14 - Guiding the Nextruder cable	24
Step 15 - Attaching the first and second nextruder dock	25
Step 16 - Dock inspection	25
Step 17 - Dock inspection: video	26
Step 18 - Nozzle seal not pre-installed: parts preparation	26
Step 19 - Nozzle seal not pre-installed: assembly	27
Step 20 - Nozzle seal not pre-installed: installation	27
Step 21 - Guiding the Nextruder PTFE tube	28
Step 22 - Wi-fi antenna holder versions	28
Step 23 - Side version: connecting the Nextruder cables	29
Step 24 - Side version: Installing the Wi-Fi antenna: parts preparation	29
Step 25 - Side version: Installing the Wi-Fi antenna	30
Step 26 - Back version: Connecting the Nextruder cables	30
Step 27 - Back version: Wi-Fi antenna holder: parts preparation	31
Step 28 - Back version: Installing the Wi-Fi antenna: antenna preparing	31
Step 29 - Back version: Installing the Wi-Fi antenna: antenna preparing	32


Step 30 - Back version: Installing the Wi-Fi antena holder	32
Step 31 - Back version: XL buddy box covering	33
Step 32 - Back version: Installing the Wi-Fi antenna: parts preparation	33
Step 33 - Back version: Installing the Wi-Fi antenna	34
Step 34 - Spoolholder assembly versions	34
Step 35 - Printed spool holder: parts preparation	35
Step 36 - Printed spool holder: adjusting the nut	35
Step 37 - Printed spool holder: assembly	36
Step 38 - Printed spool holder: Mounting the spool holder	36
Step 39 - Injection molded spool holder: parts preparation	37
Step 40 - Injection molded spool holder adjusting the nut	37
Step 41 - Injection molded spool holder: assembly	38
Step 42 - Injection molded spool holder: preparing the spool holder	38
Step 43 - Injection molded spool holder: mounting the spool holder	39
Step 44 - Nextruder assembly: parts preparation	39
Step 45 - Docking the Nextruder	40
Step 46 - Nextruder cable bundle assembly	40
Step 47 - Nextruder cable bundle assembly versions	41
Step 48 - Two screws version: Nextruder cable bundle assembly	41
Step 49 - No screws version: Nextruder cable bundle assembly	42
Step 50 - Almost done!	42
Step 51 - Reward yourself	43
4. First run	44
Step 1 - Before you start with Multi-Tool	45
Step 2 - Nozzle seal height calibration	46
Step 3 - Nozzle seal height calibration	46
Step 4 - Preparing the printer	47
Step 5 - Firmware update	47
Step 6 - Checking the print fan type	48
Step 7 - Setting silver print fan	48
Step 8 - Wizard: Network and Prusa Connect setup	49
Step 9 - Wizard: Calibration tests	49
Step 10 - Wizard: Dock Position Calibration	50
Step 11 - Wizard: Remove the dock pins	50
Step 12 - Wizard: Loosen screws	51
Step 13 - Wizard: Lock the tool	51
Step 14 - Wizard: Tighten the upper screw	52
Step 15 - Wizard: Tighten the lower screw	52
Step 16 - Wizard: Install the dock pins	53
Step 17 - Wizard: Dock successfully calibrated	53
Step 18 - Wizard: Test Loadcell	54
Step 19 - Wizard: Calibrate Filament Sensors	54
Step 20 - Wizard: Calibrate Filament Sensors	55
Step 21 - Calibration pin: parts preparing	55
Step 22 - Calibration pin: parts assembly	56
Step 23 - Wizard: Tool Offset Calibration	56
Step 24 - Wizard: Sheet install	57
Step 25 - Wizard: Calibration pin installation	57
Step 26 - Wizard: Offset calibration done	58
Step 27 - Calibration pin	58
Step 28 - Wizard: Phase stepping	59
Step 29 - It's done	59
Step 30 - Prusa Nextruder sock (Optional)	60
Step 31 - Regular printer maintenance	60

Step 32 - Quick guide for your first prints	61
Step 33 - Printable 3D models	61
Step 34 - Give us feedback	62
Step 35 - Prusa knowledge base	62
Step 36 - Join Printables!	63
Step 37 - Haribo time!	63
Manual changelog XL Dual-Head (Assembled)	64
Step 1 - Version history	65
Step 2 - Changes to the manual (1)	65
Step 3 - Changes to the manual (2)	66
Step 4 - Changes to the manual (3)	66
Step 5 - Changes to the manual (4)	67
Step 6 - Changes to the manual (5)	67
Step 7 - Changes to the manual (6)	68
Step 8 - Changes to the manual (7)	68

1. Introduction




STEP 1 General information

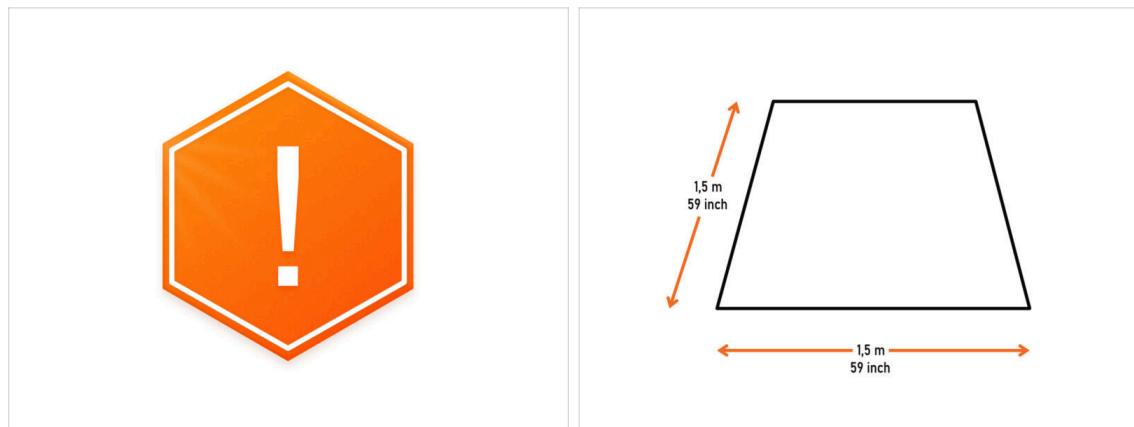

The package with the printer is heavy! Always ask another person for help with handling.


- For the assembly, prepare a clean workbench with a space of at least **1,5 m x 1,5 m (59 in x 59 in)**.
- We recommend a **bright light above your workbench**. Some parts of the printer are dark, and inadequate light could make the assembly more difficult.

STEP 2 How to navigate through the manual

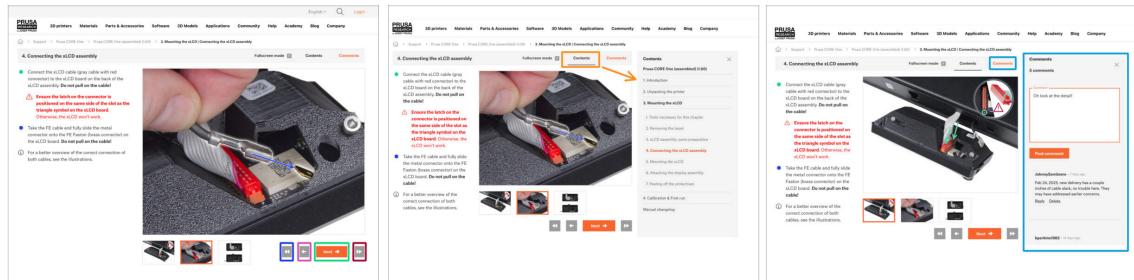

- Use the graphical navigation buttons in the bottom right corner or the arrow keys on your keyboard:
 - Next button / Right arrow key** - Moves to the next image, or to the next step if it's the last image in the step.
 - Left arrow button / Left arrow key** - Moves to the previous image, or to the previous step if it's the first image in the step.
 - Play backward button / Up arrow key** - Moves to the previous step.
 - Play forward (Next) button / Down arrow key** - Moves to the next step.
- Click on **Contents** to expand the full list of steps in this guide. This allows you to jump to any step regardless of the sequence.
- Click on **Comments** to open the discussion for a specific step and leave your feedback.

STEP 3 What awaits you during the unpacking

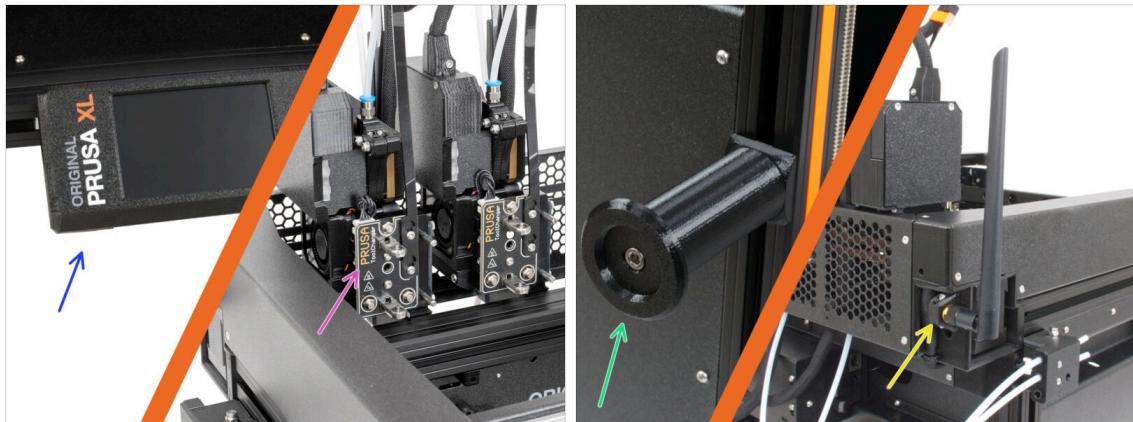

- ① Because of transportation, some of the fragile parts must be safely packed separately in the printer package. This manual will take you through the installation of these parts on the printer.
- ◆ **These parts will be installed:**
 - ◆ xLCD assembly
 - ◆ Multi-Tool extruder assembly
 - ◆ Spool holder
 - ◆ Wi-Fi antenna

STEP 4 Tools in the package



◆ The package includes:


- ⓘ Some of the tools are intended primarily for regular printer maintenance. You won't need them for this manual. At the beginning of the assembly chapter is a list of the necessary tools.
- ⚙ Torx key TX6, TX8, TX10
- ⚙ Allen key 2.5 mm, 4.0 mm
- ⚙ Wrench 13-16
- ⚙ Universal wrench
- ⚙ T10 screwdriver
- ⚙ Philips PH2 screwdriver
- ⚙ Needle-nose pliers
- ⓘ The printer's package contains a lubricant, which is intended for maintenance. No need to apply it during the assembly.
For tips on how to apply the lubricant, see our [Regular printer maintenance](#) guide.

STEP 5 Labels guide



- ⓘ All the boxes and bags including parts for the build are labeled.
- ⚙ The LCD Fasteners bag includes an extra spare of each part contained in the bag. The amount of spare parts is written on the label. This number is included in the total number of each type of part.

STEP 6 Cheatsheet

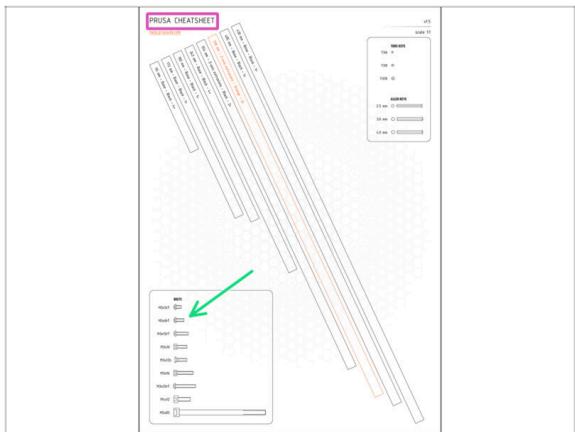


- ❖ Your package contains a letter, on the back of which is a Cheatsheet with drawings of all the necessary fasteners.
- ❖ The fasteners drawings are 1:1 scale, so you can compare the size by placing the fastener on the paper to make sure you are using the correct type.
- ⓘ You can download it from our site prusa.io/cheatsheet-xl. Print it at 100 %. Do not rescale it, otherwise it will not work.

STEP 7 Prusa nextruder sock



- ❖ A silicone nextruder sock is supplied with each Nextruder package.
- ❖ Installing the Prusa nextruder sock is recommended, but optional. **We will provide details on how to install it later on in the guide.**
- ⓘ The main function of a silicone sock is to keep the temperature in the heater block stable, which improves the printer's performance.
- ⓘ Also, it keeps your hotend clean from filament debris and protects it in case the print detaches from the print surface.

STEP 8 CAUTION: Lubricant Handling

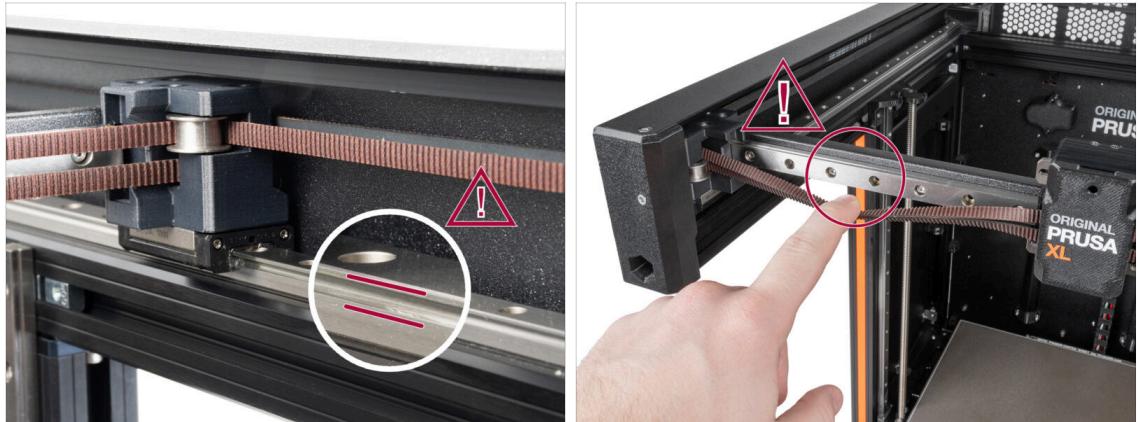

⚠ CAUTION: Avoid direct skin contact with the lubricant used for the linear rails in this printer. If a contact occurs, wash your hands immediately. Especially before eating, drinking, or touching your face.

- ◆ Lubricant accumulates in the printer's bearings, mainly in the linear rail channels.

STEP 9 View high resolution images



- When you browse the guide on help.prusa3d.com, you can view the original images in high resolution for clarity.
- Hover your cursor over the image and click the Magnifier button ("view original") in the top left corner.

STEP 10 We are here for you!


The image consists of two side-by-side screenshots from the Prusa 3D website. The left screenshot shows the homepage with a banner for the 'Original Prusa i3 MK3S+' and a live chat interface. The right screenshot shows a step-by-step assembly guide for the 'Original Prusa XL', specifically Step 18, with a comment section where a user has posted a message.

- ◆ Lost in the instructions? Missing screw or cracked printed part? **Let us know!**
- ◆ You can contact us using following channels:
 - ◆ Comments under each step.
 - ◆ Our 24/7 live chat at shop.prusa3d.com
 - ◆ Writing an email to info@prusa3d.com
- ◆ Are you ready to get started on the assembly? Let's move on to chapter 2. **Printer unboxing.**

2. Printer unboxing




STEP 1 Introduction

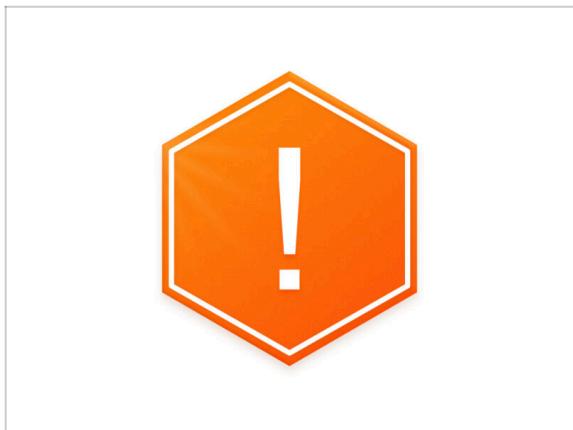

- ⚠ The printer package is heavy! Ask someone to help you to unpack the printer.**
- ⚠ If any children are helping you with the assembly, always supervise them to avoid injury.**
- ⓘ We recommend keeping all the packaging material in case you decide to send the printer back for service.**

STEP 2 Opening the package

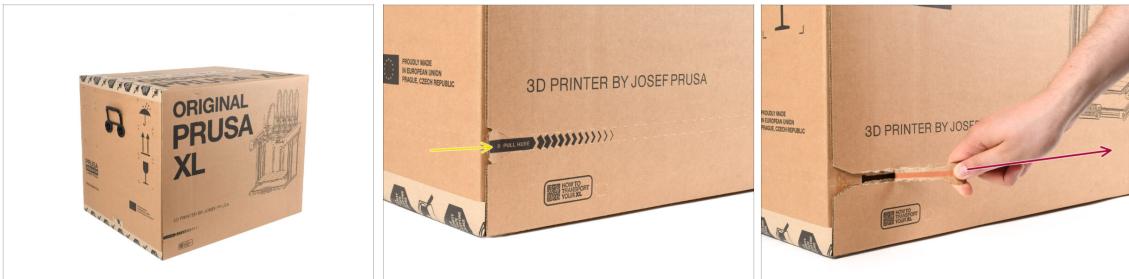


- Place the package on a stable surface. **Make sure that the package is oriented top side up.** Note the arrows on the box.
- ◆ The package is equipped with a tear strip that splits the box in two parts.
- ◆ Peel off the entire tear strip to split the box.

STEP 3 Opening the package



- ◆ Remove the top part of the box by lifting it up.
- ⚠ The top cardboard inserts contain parts necessary for the assembly. **Do not throw them out!**
- ⓘ Your printer may differ slightly from the one shown in the photos. This does not affect the guide; the photos are for illustrative purposes only.
- ◆ Remove the Haribo gummy bears from the back of the box and put them aside. We will release them from captivity soon.
- ◆ Remove the welcome letter, which also contains the cheatsheet. **Do not dispose of the welcome letter!**

STEP 4 Removing the inserts

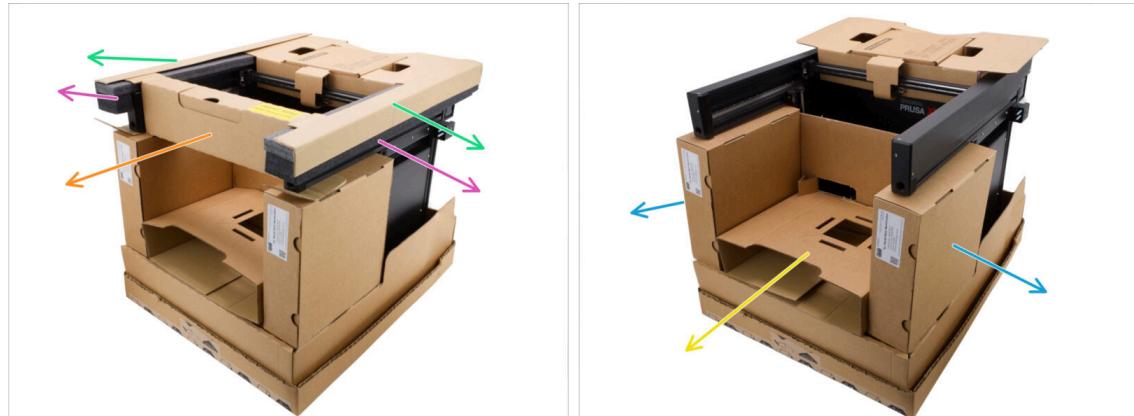

- ◆ Remove the two hardened cardboard top fixations.
- ◆ Remove the two foam top fixations.
- ◆ Remove the top front cardboard insert. There are various parts inside; be careful not to lose these when removing the cardboard insert.
- ◆ Remove the cardboard insert between the two extruder boxes.
- ◆ Remove the two extruder boxes.

STEP 5 Removing the inserts



- ➊ Lift the two flaps on the side of the front cardboard insert, bend the vertical side down and remove the insert.
- ➋ Remove the box with Prusament on top.
- ➌ Remove the test print by carefully lifting the corner of the print sheet where the print is located. Slightly bending the print sheet like this will make the print snap out from the surface.

STEP 6 Removing the inserts



- ➊ There is a small cut-out in the top cardboard insert that locks it to the printer's frame. Pull it to unhook the insert.
- ➋ Unhook the protective cardboard strip that is wrapped around the X-axis.
- ➌ Printer parts are stored inside the top cardboard insert! Make sure not to lose them!
- ➍ Lift the whole insert and remove it.

STEP 7 Unpacking the printer



- ❖ Use the side handles on the printer to lift it up.
- ❖ Keep the bottom of the box in place by holding it down while you lift the printer up.
- ⚠ Do not lift the printer by the top metal profiles!!! Otherwise, you may warp the printer parts and damage the parts such as the LED lighting inside.
- ⚠ Do not lift the printer alone; ask someone to help you lift the printer by the handle on the side of the printer.

STEP 8 Printer is ready for setup




- ❖ Good job! The printer is ready for the next chapter.
- ❖ Visit chapter 3. Printer set up.

3. Printer set up



STEP 1 Tools necessary for this chapter

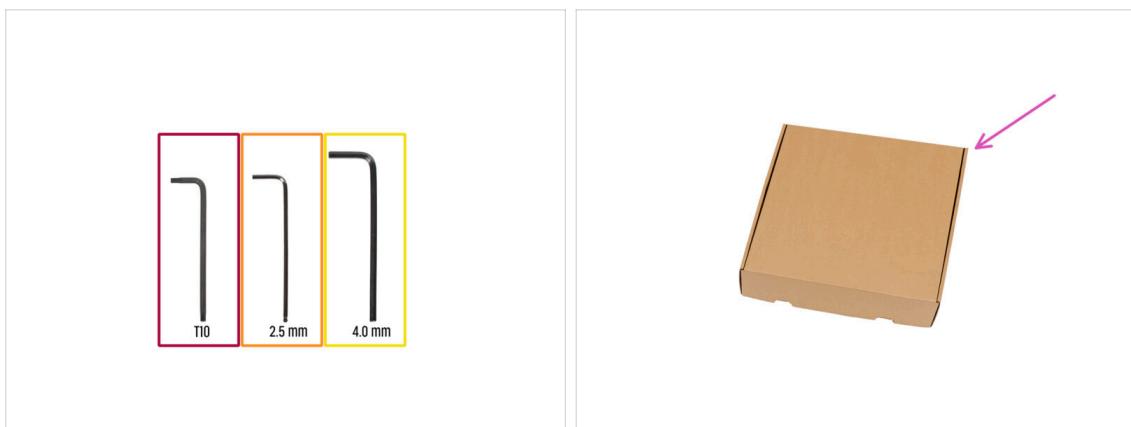

- For this chapter, please prepare:
 - ◆ T10 Torx key
 - ◆ 2.5 mm Allen key
 - ◆ 4.0 mm Allen key
- ◆ Use a cardboard box as a heatbed protection during the setup. Use one of the Nextruder boxes that you received with your printer.

STEP 2 Injection molded xLCD: parts preparation



- ① Starting from September 2024, you may receive a new injection-molded xLCD. Check the photos and identify your version.
 - ◆ If you have the injection-molded xLCD, proceed with this step and continue to the next step →
 - ◆ If you have the older printed version of the xLCD, continue to this step: [Printed xLCD: parts preparation](#)
- For the following steps, please prepare:
 - ◆ xLCD assembly (1x)
 - ◆ M3x10 screw (2x)

STEP 3 Injection molded xLCD: xLCD cables



- ◆ Connect the xLCD cable to the slot on the xLCD board.
 - ⓘ There is a latch on the xLCD cable connector, which must be facing the triangle symbol on the board. See the picture.
- ◆ Push the xLCD cable connector to fully connect to the xLCD. Hold the xLCD cover.
- ◆ Push the grounding connector fully into the PE faston.

STEP 4 Injection molded xLCD: mounting the xLCD



- ◆ Align the xLCD assembly with the nuts in the front aluminum extrusion.
- ◆ Insert and tighten the M3x10 screw from the right side of the xLCD.
- ◆ Insert and tighten the M3x10 screw from the left side of the xLCD.
- ◆ The injection-molded xLCD is mounted and ready.
- ⓘ Proceed to this step: **Preparing the printer**


STEP 5 Printed xLCD: parts preparation



◆ For the following steps, please prepare:

- ◆ xLCD assembly (1x)
- ◆ M3x16 screw (2x)


STEP 6 Printed xLCD assembly versions

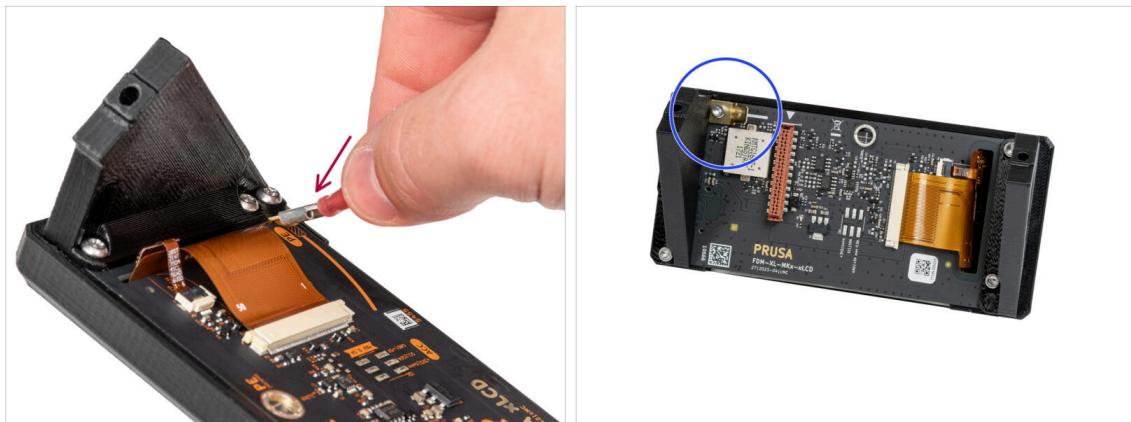

⚠ Take a look at the printed xLCD board; there are two variants:

- ◆ Version A: faston on the bottom right. Proceed to the next step.
- ◆ Version B: faston on the top left. Proceed to this step: **Version B: installing the xLCD**

STEP 7 Version A: installing the xLCD

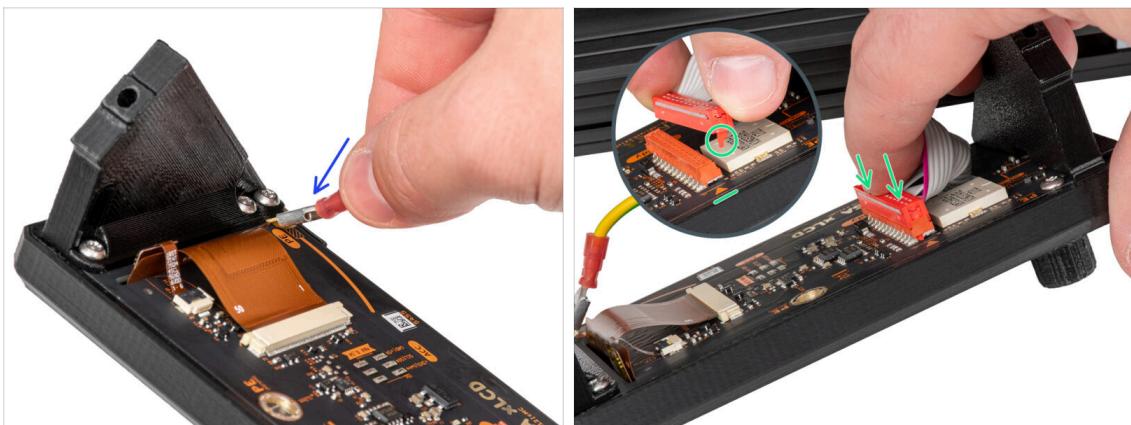

- Carefully turn the printer so that the front side is facing you.
- From the front of the printer, place the xLCD assembly close to the lower front aluminum extrusion where the xLCD cables are.
- Grab the grounding cable and connect it to the PE connector on the xLCD.
- Connect the xLCD cable to the slot on the xLCD board.
 - ⓘ There is a latch on the xLCD cable connector, which must be facing the triangle symbol on the board. See the detail.
- Once the xLCD is prepared, proceed to this step: **Mounting the xLCD**

STEP 8 Version B: installing the xLCD



- Carefully turn the printer so that the front side is facing you.
- From the front of the printer, place the xLCD assembly close to the lower front aluminum extrusion where are the xLCD cables.
- Connect the xLCD cable to the slot on the xLCD board.
 - ⓘ There is a latch on the xLCD cable connector, which must be facing the triangle symbol on the board. See the detail.
- Connect the grounding cable and connect it to the PE connector on the xLCD.
- Push the grounding connector fully into the PE faston and continue to the next step →

STEP 9 Mounting the xLCD



- ◆ Align the xLCD assembly with the profile nuts (M3nEs) in the front aluminum extrusion.
 - ⓘ Profile nuts (M3nE) are already installed in the aluminum profile by Prusa production department.
- ⓘ Insert and tighten the M3x16 screw from the left side of the xLCD.
- ⓘ Insert and tighten the M3x16 screw from the right side of the xLCD.

STEP 10 Preparing the printer




- ⓘ Reminder: To handle the printer, **always grab the handles on both sides of the printer**. Do not lift the printer by the aluminum extrusions or the metal sheet profiles on top.
- ⓘ In the following steps, we will work with tools and install the extruder above the heatbed. Protect the print surface against any possible damage. An empty Nextruder box can serve this purpose.
- ⓘ Place the empty cardboard box approximately to the front center part of the heatbed.
- ⓘ Manually move the X-axis assembly all the way to the front of the printer.
- ⓘ Manually move the X-carriage approximately to the center of the X-axis.

STEP 11 Nextruder assembly: parts preparation



- ⓘ Starting in April 2025, you may receive a new cable bundle. The difference is described before the cable bundle is connected to the Nextruder.
- ⚡ For the Nextruder cable bundle assembly please prepare:
 - ⚡ Cable bundle (2x)

STEP 12 Nozzle seal versions

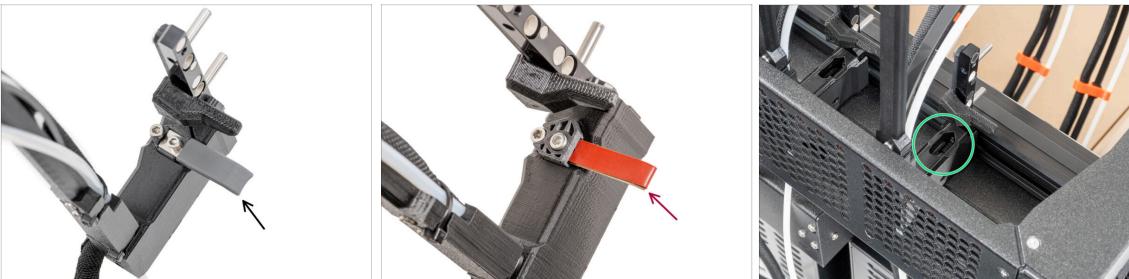

- ⓘ The latest assemblies come with the nozzle seal pre-installed on the extruder dock. Examine one of the extruder docks closely to see if the nozzle seal is already in place.
- ⚠️ **The nozzle seals that are already pre-installed on the extruder docks might differ in color. This does not affect the assembly process.**
 - ⚡ Grey nozzle seal.
 - ⚡ Red nozzle seal.
- ⓘ If you DO HAVE the pre-installed nozzle seal, continue to this step: [Guiding the Nextruder cable](#)
- ⓘ If your nextruder dock DOES NOT have the pre-installed nozzle seal, continue to the next step

STEP 13 Nozzle seal not pre-installed: nextruder dock preparation



- Repeat this step for both tool heads:
 - ◆ Insert the M3nS nut into the nextruder dock.
 - ◆ Make sure the nut is pushed into the dock all the way. If not, use the Allen key to push the nut into the Nextruder dock.
- ⓘ If the nut fell out during transport, look for it in the nextruder box. There is also a spare one in the nozzle seal assembly package if needed.
- ⚠ Do not install the nozzle seal yet! This will be done later. We need to attach the extruder dock to the printer first.
Continue to the next step.

STEP 14 Guiding the Nextruder cable




- Carefully turn the printer 180° so that you are facing the PSU (Power Supply Unit) rear side of the printer.
- ◆ Locate the long metal profile with five M3 holes inside the rear aluminum extrusion and slide it all the way to the left side.
- ◆ We'll use the first two M3 holes in the metal profile.

STEP 15 Attaching the first and second extruder dock



- ◆ If your extruder dock does not have the pre-installed nozzle seal, DO NOT install it yet! Attach the dock as instructed in this step, and we will install the nozzle seals after the dock inspection.
- ◆ Place the xl-dock-cable-router on the bottom metal sheet below the aluminum extrusion on the right side of the printer.
- ◆ Locate the protruding screw from the XL-dock-cable-router. Attach the screw to the first M3 hole in the long metal profile (tch-mounting-insert). Check through the hole in the rear if the cable holder is lined up with the hole.
- ◆ Push the 2.5 mm Allen key all the way through the hole in the rear metal sheet until you reach the **middle** screw in the xl-dock-cable-router and tighten the screw.
- ◆ **The dock is a press fit; the screw must be tightened firmly.**
- ① Repeat this step for the second tool head.

STEP 16 Dock inspection

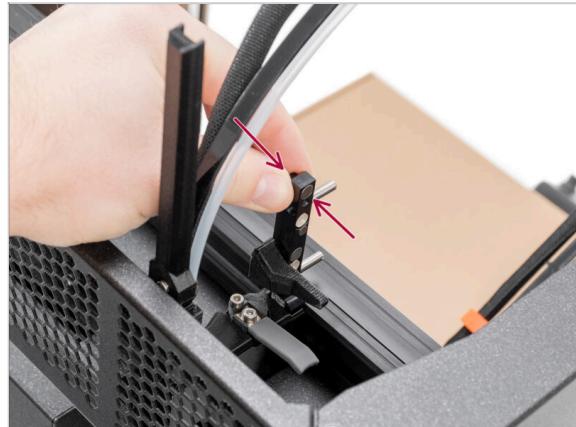


- ① This step is the same for all versions of the dock assembly.
- ⚠ Check that the docks are properly tightened. **The dock must not move.**
- ◆ Please watch the video in the next step for a better understanding.

STEP 17 Dock inspection: video




- The following instructions need to be done correctly and carefully. Achieve better understanding and successful assembly by watching the video alongside the guide.

STEP 18 Nozzle seal not pre-installed: parts preparation

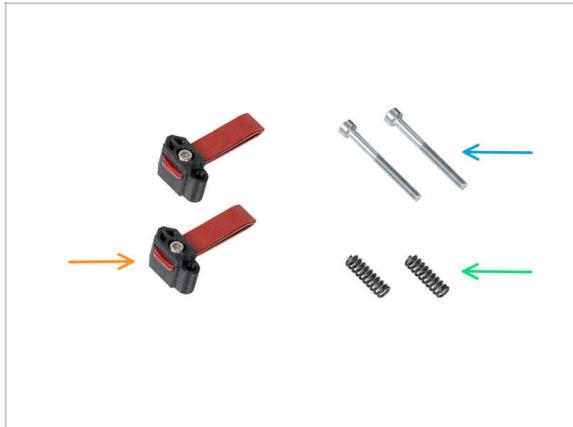

- The following instructions are intended only for printers **without** pre-installed nozzle seals.
- If your nextuder docks have the nozzle seals already installed, go to this step: [Guiding the Nextruder PTFE tube](#).
- For the following steps, please prepare:
 - ◆ Nozzle seal (2x)
 - ◆ M3x30 screw (2x)
 - ◆ Spring 15x5 (2x)

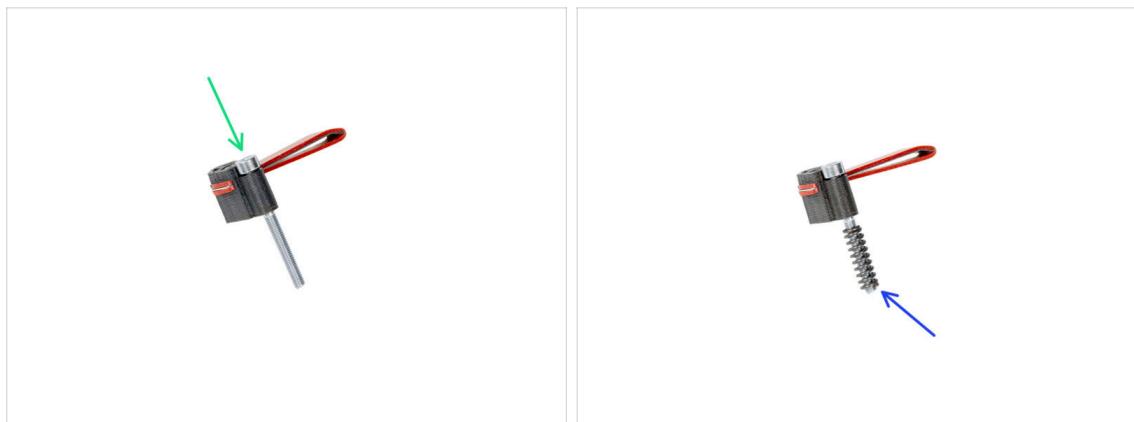
STEP 19 Nozzle seal not pre-installed: assembly

- ◆ Insert the M3x30 screw into each nozzle seal.
- ◆ Slide the spring on each nozzle seal.
- ◆ Do this for both nozzle seals.

STEP 20 Nozzle seal not pre-installed: installation

- ① **The current nozzle seal position is temporary;** the exact height will be set in the next chapter once all the Nextruder parts are mounted.
- ◆ Insert the nozzle seal (with the spring) into the dock.
- ◆ Using a 2.5 mm Allen key, tighten the screw so that the head of the screw is no more than 1 mm above the dock.
- ◆ Good! The first dock is ready. Repeat the procedure for the second dock.

STEP 21 Guiding the Nextruder PTFE tube

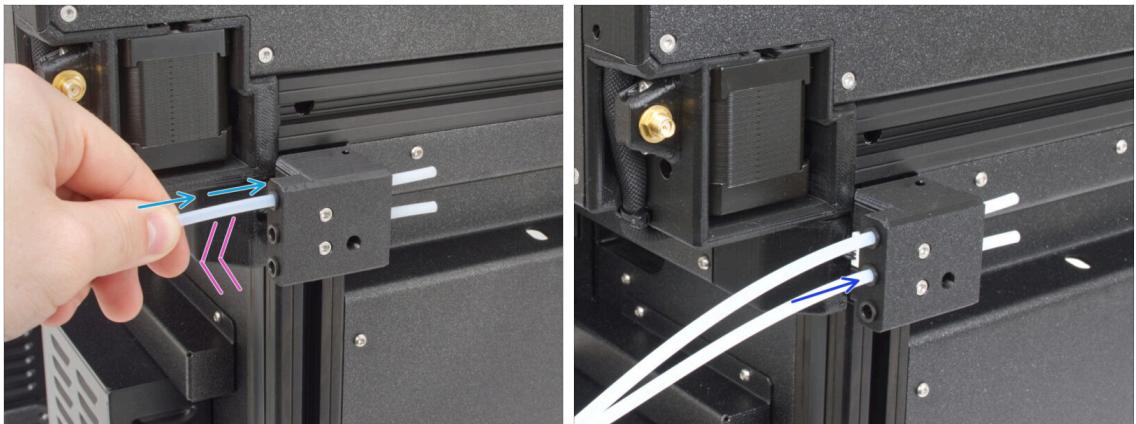

- ◆ Locate the filament sensor on the side of the printer. Firmly push the PTFE tube from the first nextruder into the top hole in the filament sensor all the way.
- ◆ Gently pull the PTFE tube back; this will push out the black collet in the side filament sensor and lock the tube.
- ◆ Repeat this process with the PTFE tube from the second nextruder.

STEP 22 Wi-fi antenna holder versions



- ◆ Let's connect the Wi-Fi antenna now. There are two versions of this component. Identify which version of the Wi-Fi antenna your printer has.
- ◆ **Side version:** The antenna connector is prepared by the manufacturer, and the Wi-fi antenna holder is on the side.
- ◆ **i** If you have the side version, continue to the next step in the guide →
- ◆ **Back version:** The antenna connector has to be assembled, and the Wi-fi antenna will be mounted in the middle of the rear side of the printer.
- ◆ **i** If you have the back version, skip to this step: **Back version: Connecting the Nextruder cables**

STEP 23 Side version: connecting the Nextruder cables



- ◆ Locate the xl-rear-cable-management-plug (cover) on the rear of the printer.
- ◆ Slightly loosen two screws on the cover. No need to remove them completely. Slide the cover to the right and remove it from the printer.
- ◆ Connect the first Nextruder cable to the upper slot labeled DWARF 1.
- ◆ Connect the second Nextruder cable to the lower slot labeled DWARF 2.
- ◆ Attach the connector cover to the screws. Slide it to the left and tighten the screws. Make sure that the cables are not pinched or damaged

STEP 24 Side version: Installing the Wi-Fi antenna: parts preparation




- ◆ For the following steps, please prepare:
- ◆ Wi-Fi antenna (1x)
- ◆ **i** The Original Prusa XL is shipped with two versions of the Wi-Fi antenna, each with a different shape. The functionality is the same.

STEP 25 Side version: Installing the Wi-Fi antenna



- ❖ Locate the Wi-Fi antenna connector on the right rear corner of the printer.
- ❖ The antenna can be rotated around and bent in two directions.
- ❖ We recommend pointing the antenna straight upwards.
- ➊ When the Wi-Fi antenna is installed, skip to this step to prepare the spool holders: **Spoolholder assembly versions**

STEP 26 Back version: Connecting the Nextruder cables

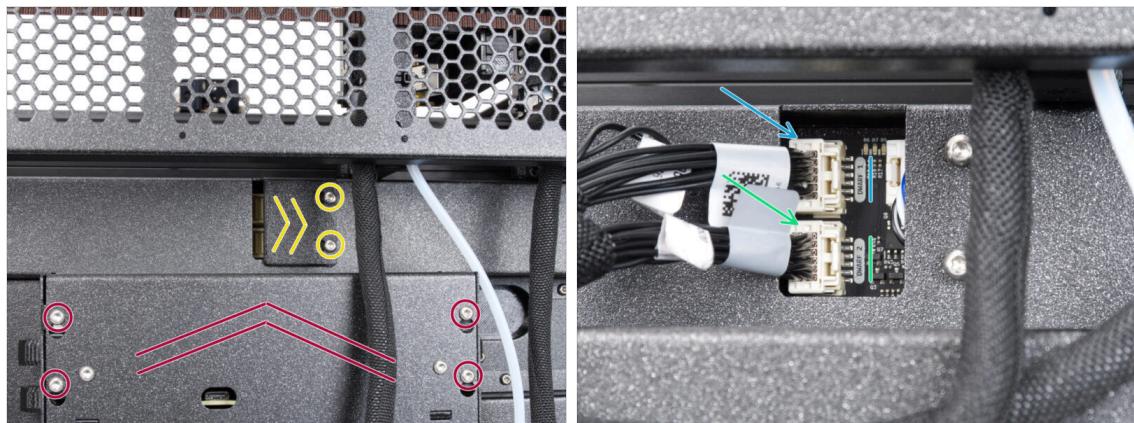


- ❖ Locate the xl-rear-cable-management-plug (cover) on the rear of the printer.
- ❖ Loosen two screws on the cover slightly. No need to remove them completely. Slide the cover to the right and remove it from the printer.
- ❖ Loosen four screws securing the electronics cover. Remove the cover.
- ❖ Connect the first Nextruder cable to the upper slot labeled DWARF 1.
- ❖ Connect the second Nextruder cable to the lower slot labeled DWARF 2.

STEP 27 Back version: Wi-Fi antenna holder: parts preparation



- ◆ For the following steps, please prepare:
 - ◆ Wifi-antenna-holder- version E3/E4 (1x)
 - ◆ Antenna cable (1x)

STEP 28 Back version: Installing the Wi-Fi antenna: antenna preparing

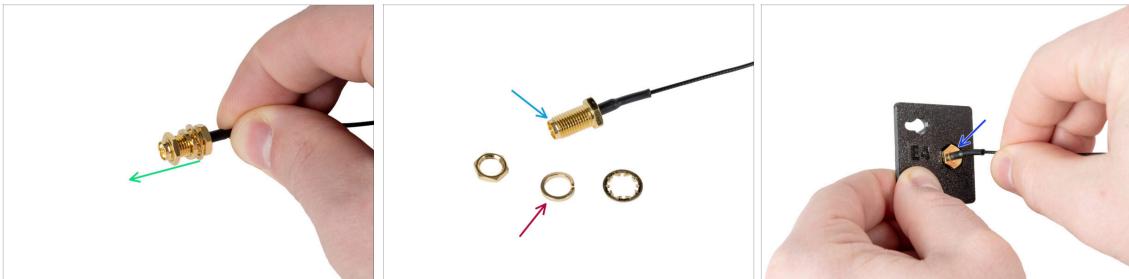


- ◆ Remove the nut with the washers from the antenna connector.
- ◆ The antenna connector is ready.
- ◆ The latest version of the connector has a thicker washer. We do not need it anymore. You can throw it away.
- ◆ Insert the antenna connector into the same-shaped hole in the Wifi-antenna-holder-R4.

STEP 29 Back version: Installing the Wi-Fi antenna: antenna preparing




- ➊ Push the antenna connector through the Wifi-antenna-holder-R4.
- ➋ Insert the thinner washer back onto the connector.
- ➌ Using the universal wrench, tighten the nut on an antenna connector.
- ➍ Good job! The Wi-Fi antenna is prepared.

STEP 30 Back version: Installing the Wi-Fi antenna holder

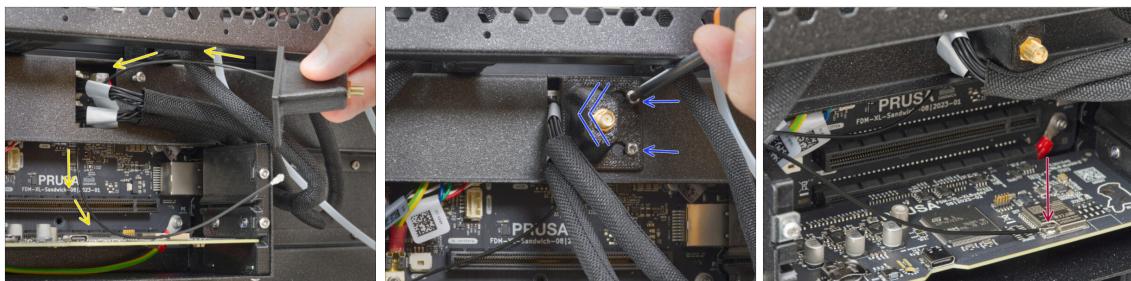

- ➊ Push the antenna cable through the opening in the cable cover (metal sheet) and guide it behind the cover to the electronics box.
- ➋ Attach the antenna-holder on the screws, slide the cover to the left, and tighten the screws.
- ➌ Gently, but firmly, connect the antenna cable with the antenna connector on the XL buddy board.
- ➍ Support the board from below with your finger while attaching the antenna cable to prevent damaging the board.

STEP 31 Back version: XL buddy box covering

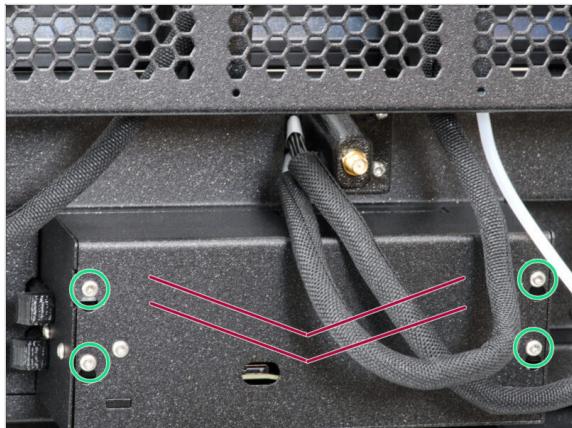

Be carefull, do not pinch any cables!

- Put the XL-buddy-box-cover back on the printer.
- With a T10 key tighten the four screws.

STEP 32 Back version: Installing the Wi-Fi antenna: parts preparation




- For the following steps, please prepare:
 - Wi-Fi antenna (1x)
- The Original Prusa XL is shipped with two versions of the Wi-Fi antenna, each with a different shape. The functionality is the same.

STEP 33 Back version: Installing the Wi-Fi antenna



- ❖ Locate the Wi-Fi antenna connector in the middle of the printer.
- ❖ Screw the Wi-Fi antenna on the antenna connector. The antenna can be rotated around and bent in two directions.
- ❖ We recommend pointing the antenna straight upwards.
- ❖ Well done! With the Wi-Fi antenna installed, let's move on to the spoolholders in the next step.

STEP 34 Spoolholder assembly versions

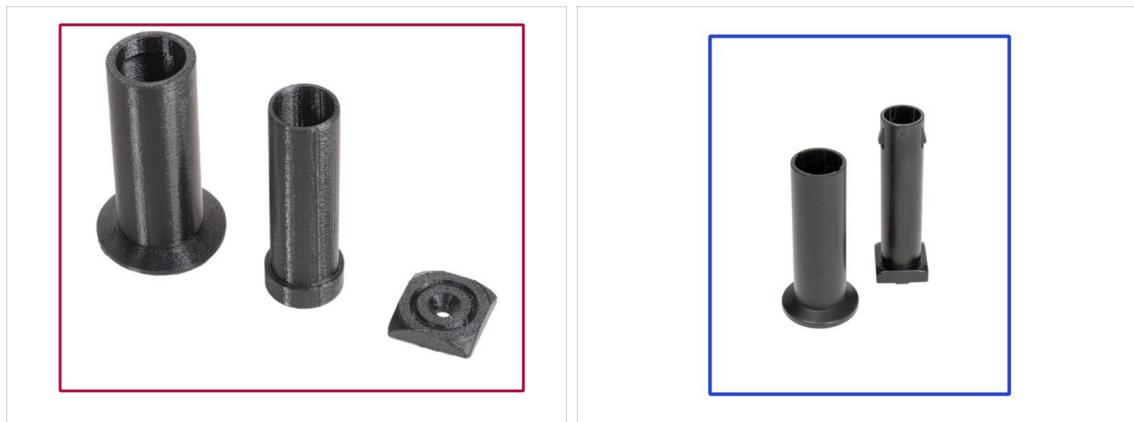

- ⓘ **Original Prusa XL comes with two versions of the spool holder.** Each version has slightly different parts and different procedures.
- ⓘ Refer to the pictures to compare which parts you have, and then choose the instructions that match:
 - ⓘ **Printed spool holder:** Set of three printed parts. If you have this version, [continue to the next step in the guide](#) →
 - ⓘ **Injection molded spool holder:** Set of two injection molded parts. If you have this version, continue to [Injection molded spool holder: parts preparation](#)

STEP 35 Printed spool holder: parts preparation

◆ For the following steps, please prepare:

- ◆ Spool-holder-slider (2x)
- ◆ Spool-holder-base (2x)
- ◆ Spool-holder-mount (2x)
- ◆ M5x85 screw (2x)
- ◆ M5nEs nut (2x)

STEP 36 Printed spool holder: adjusting the nut

- ◆ Carefully turn the printer so that the side with the Wi-Fi antenna and side filament sensor faces you.
- ◆ Insert the M5nEs nut into the front support extrusion (with the orange plastic cover). Insert the side with the spring (metal plate) first, then push the nut inside.
- ◆ The M5nEs nut is free to move, you can adjust the position as you want. Note that the nut must be slightly pushed in to move smoothly. We recommend approximately the same position as shown in the picture.
- ◆ Insert the second M5nEs nut in the extrusion approximately to the same position as shown.

STEP 37 Printed spool holder: assembly

◆ **Repeat this step for both spool holders:**

- ◆ Insert the spool-holder-base into the spool-holder-slider and push it through a little through the part.
- ◆ Attach the spool-holder to the spool-holder-mount.
- ◆ Insert the M5x85 screw into the spool-holder-assembly.

STEP 38 Printed spool holder: Mounting the spool holder

- ◆ Attach the first spool holder assembly to the M5nEs nut in the extrusion. Note that there is a protrusion on the spool-holder-mount, which must fit into the groove in the extrusion.
- ◆ Attach and tighten the second spool holder assembly.
- ◆ Keep in mind that if you mount the Spool holder too high or too low, it may not fit the filament spool on it. There has to be enough space around it.
- ⚠ **Do not use the spool holder as a handle to lift or move the printer!**
- ◆ **Well done!** With the spoolholders mounted, we can proceed to assemble the extruders. **Skip to this step: Nextruder assembly: parts preparation**

STEP 39 Injection molded spool holder: parts preparation



- For the following steps, please prepare:
- Spool-holder-slider (2x)
- Spool-holder-base (2x)
- M4x12 screw (2x)
- M4nEs nut (2x)

STEP 40 Injection molded spool holder adjusting the nut



- Carefully turn the printer so that the side with the side filament sensor is facing you.
- Insert the first M4nEs nut into the front support extrusion (with the orange plastic cover). Insert the side with the spring (metal plate) first, then push the nut inside.
- Insert the second M4nEs nut into the extrusion.
- The M4nEs nuts are free to move; you can adjust the position as you want. Note that the nut must be slightly pushed in to move smoothly. We recommend approximately the same position as shown in the picture.
- Keep in mind that if you mount the spool holder too high or too low, it may not fit the filament spool on it. There has to be enough space around it.

STEP 41 Injection molded spool holder: assembly



- ◆ Locate two pins on the spool-holder-base and align them with the rails in the spool-holder-slider.
- ◆ Insert the spool-holder-base into the spool-holder-slider and push it through.

STEP 42 Injection molded spool holder: preparing the spool holder



- ◆ Insert the M4x12 screw on the longer side of the 3mm Allen key.
- ◆ Insert the 3mm Allen key with the M4x12 screw through the assembled spool holder to the prepared hole in the spool-holder-base.
- ◆ The M4x12 screw has to protrude through the spool-holder-base.

STEP 43 Injection molded spool holder: mounting the spool holder




- ◆ Attach the spool holder assembly to the M4nEs nut in the extrusion. Note that there is a protrusion on the spool-holder-mount, which must fit into the groove in the extrusion.
- ◆ Tighten the spool holder assembly.
- ◆ Assemble the second spoolholder and attach it to the lower M4nEs nut with an M4x12 screw.

⚠ Do not use the spool holder as a handle to lift or move the printer!

ⓘ Well done! With the spoolholders mounted, we can move on to assemble the extruders.

STEP 44 Nextruder assembly: parts preparation

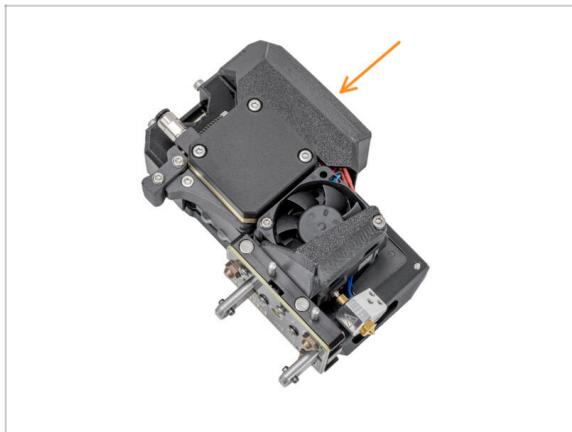

ⓘ Starting in April 2025, you may receive a new Nextruder. The difference is described before the cable bundle is connected to the Nextruder.

- ◆ For the next steps, please prepare:
 - ◆ Nextruder (2x)

STEP 45 Docking the Nextruder




- ◆ Take the Nextruder and place it carefully next to the dock.
- ◆ Place the two metal inserts through the white holes in the dock. The magnets will help you dock the Nextruder.
- ◆ Well done, the first Nextruder is ready!
- ◆ Connect the second Nextruder in the same way as the first.

STEP 46 Nextruder cable bundle assembly



- ◆ Repeat this step for all tool heads:
 - ◆ Take the first Nextruder cable bundle.
 - ◆ **⚠ Check that the cable bundle is not twisted!**
 - ◆ Loosen the two screws and hook up the holes in the flexible plate onto the screw heads. Push it up to correct the position.
 - ◆ Hold the Nextruder and using a T10 Torx screwdriver tighten the marked two screws.

STEP 47 Nextruder cable bundle assembly versions

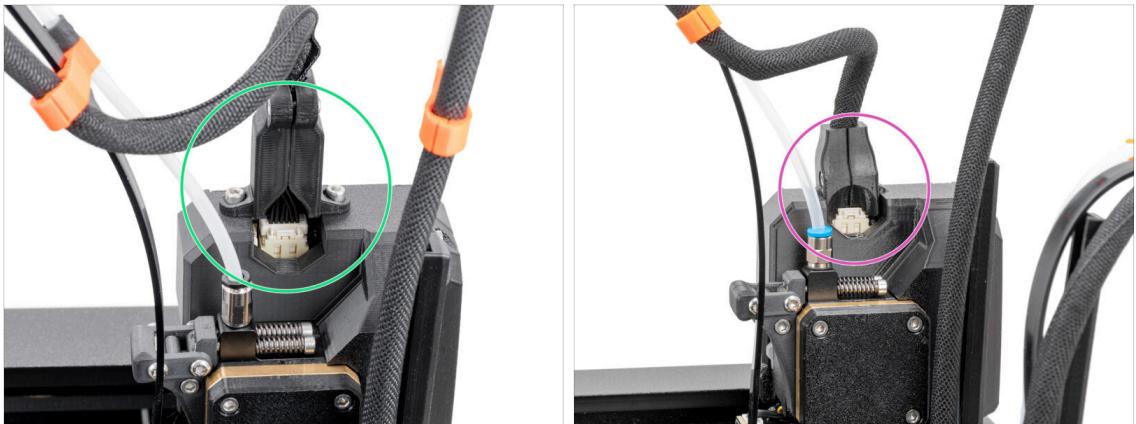


- ① Starting from April 2025, you may receive a new cable bundle:
 - ◆ The cable bundle connector is secured with two screws. Continue to the next step →
- ◆ Older version:
 - ◆ The cable bundle connector is secured without any screws. Continue to **No screws version: Nextruder cable bundle assembly**

STEP 48 Two screws version: Nextruder cable bundle assembly



- ◆ Repeat this step for all tool heads:
 - ◆ Insert the semi-transparent PTFE tube into the fitting on the Nextruder. Push it all the way in.
 - ◆ Remove two M3x10 screws.
 - ◆ Attach the cable connector to the top of the Nextruder. Secure the connector with two M3x10 screws.
- ◆ Assemble and connect all Nextruders.
- ◆ Good job, now proceed to **Almost done!**

STEP 49 No screws version: Nextruder cable bundle assembly

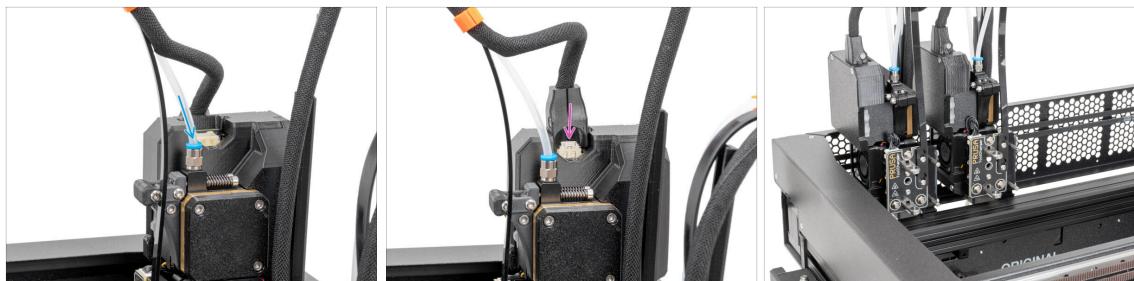


- ◆ Repeat this step for all tool heads:
 - ◆ Insert the semi-transparent PTFE tube into the fitting on the Nextruder. Push it all the way in.
 - ◆ Attach the cable connector into the top of the Nextruder.
- ① Starting from September 2024, you may receive a new black Fitting M5-4. The assembly and functionality remain identical to the blue one.
- ◆ Assemble and connect all Nextruders.
- ◆ Good job!

STEP 50 Almost done!



- ◆ Compare the final look with the picture.
- ◆ **Congratulation!** Your Original Prusa XL is ready to be fired up!

STEP 51 Reward yourself

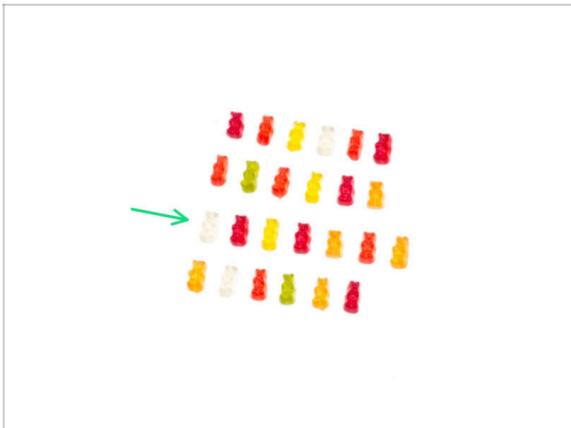

- ◆ Great job! Reward yourself with another row of gummy bears.
- ◆ Eat the third row: seven gummy bears.
- ⓘ Did you know that the bright colors of gummy bears are achieved through the use of food coloring, which adds to their visual appeal?

4. First run



STEP 1 Before you start with Multi-Tool




- ① This chapter shows a brief description of the wizard. Please note that the screenshots are illustrative and might differ from those in the firmware.
- ① Make sure you are running **Firmware 6.2.4 or newer**
 - ① You can download firmware updates [HERE](#). Guide for updating the firmware is [HERE](#)
- ① Some parts of the wizard must be done multiple times, this depends on the number of tool-heads. For example:
 - ◆ Dock Calibration
 - ◆ Loadcell calibration
 - ◆ Filament sensor calibration

STEP 2 Nozzle seal height calibration



- ⓘ Starting in May 2024, you may receive a gray nozzle seal. The assembly and functionality remain identical to the red one.
- ⚡ The first image was made with the Nextruder and dock removed from the printer for better visibility of how it should be set. **Do not remove the docks from the printer and set the seal height with the dock still connected to the printer.**
- ⚡ In the next step, we'll calibrate the height of the nozzle seal.
- ⚡ Using the 2.5 mm Allen key, tighten or untighten the M3x30 screw to calibrate the height of the nozzle seal.
- ⚡ Proceed to the next step.

STEP 3 Nozzle seal height calibration

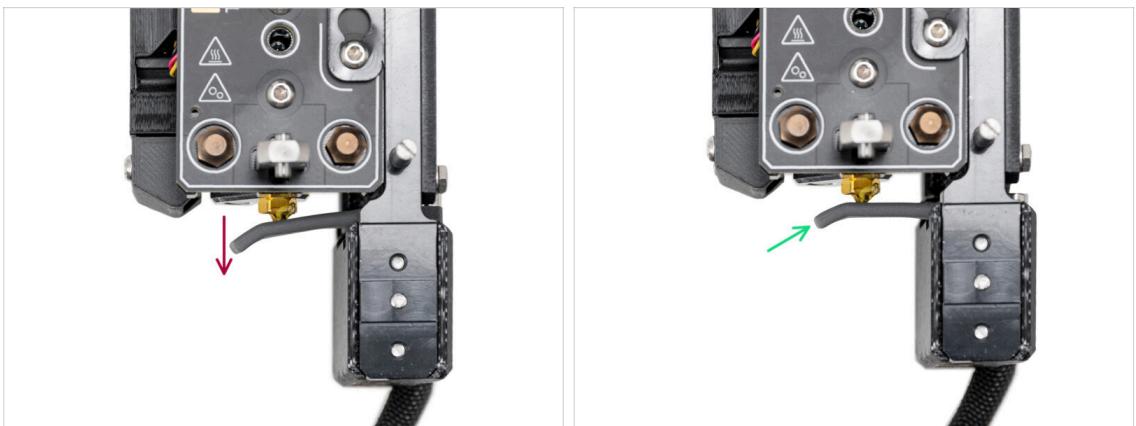

- ⚡ If the nozzle seal is too low or too high, we need to reposition its height.
- ⚡ Using a 2.5 mm Allen key:
 - ⚡ Turn the M3x30 screw clockwise to set the nozzle seal lower.
- ⓘ The correct position of the nozzle seal is that the nozzle seal is not bent, and it is touching the nozzle.
- ⓘ Try gently pushing on the bottom of the nozzle seal with your finger to check that the nozzle seal is touching the nozzle.

STEP 4 Preparing the printer




Make sure that the printer is placed in a stable place where no ambient vibrations are transmitted (for example, where other printers are printing).

- From the rear side of the printer, plug in the PSU cable.
- Turn the power switch ON (symbol "I").

STEP 5 Firmware update

- ① All shipped printer packages include a USB drive with the latest firmware. However, it is recommended to check and possibly upgrade the firmware version.
 - Visit the help.prusa3d.com page.
 - Navigate to the Prusa XL page.
 - Save the firmware file (.bbf) onto the bundled USB drive.
- ① Pro tip: To access Prusa XL homepage you can use the URL: prusa.io/XL


STEP 6 Checking the print fan type

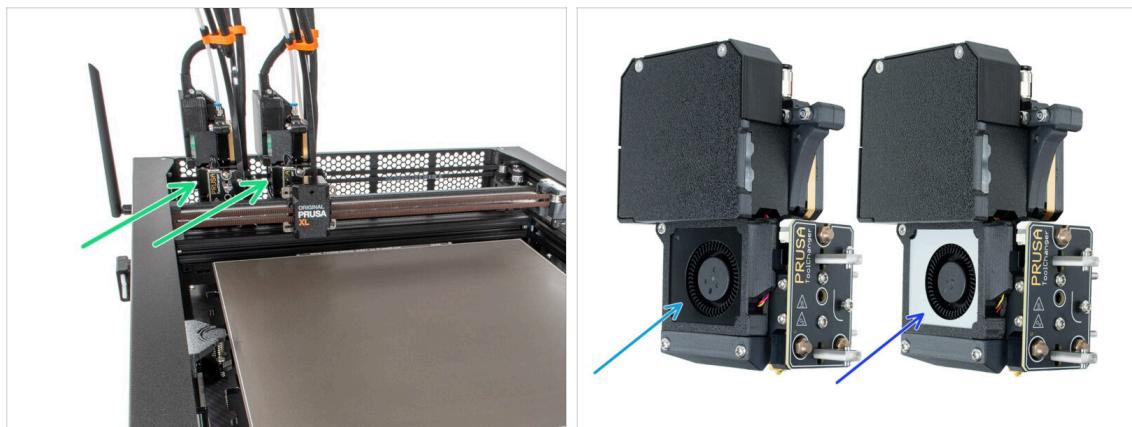

⚠ Starting January 2026, printheads are shipped with a silver print fan. Check the color of the print fan installed on the toolhead. In the following step, you will confirm the print fan type in the printer menu.

- ◆ Check the color of the print fans on the left side of both tools.
- ◆ Black print fan.
- ◆ Silver print fan.

STEP 7 Setting silver print fan

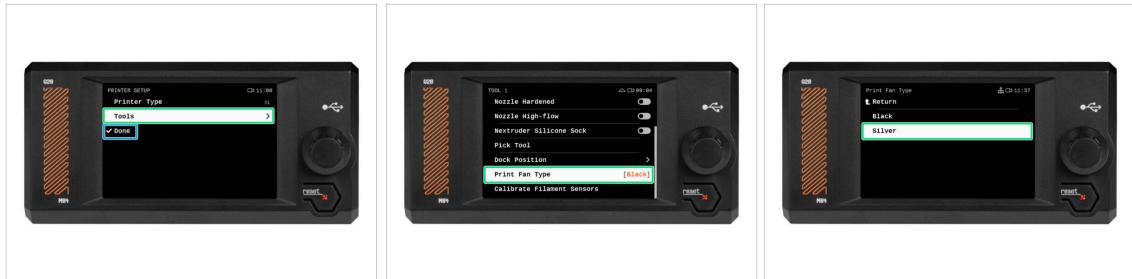


- After the printer starts up, the setup wizard will show up - Printer setup.
- ◆ If you have a black print fans, select **Done** using the knob to skip to the next step.
- ◆ If you have a silver print fan, set it in this step: **Tools** -> **Tools 1** -> **Print Fan Type** -> **Silver** for first toolhead and **Tools** -> **Tools 2** -> **Print Fan Type** -> **Silver** for second toolhead.

STEP 8 Wizard: Network and Prusa Connect setup




- ⓘ The screen prompts you to start the printer test and setup wizard.
- ⚡ The initial setup starts with the optional NETWORK SETUP, which also includes PRUSA CONNECT SETUP. Follow the instructions on the screen if you want your printer connected to Wi-Fi and Prusa Connect.

STEP 9 Wizard: Calibration tests

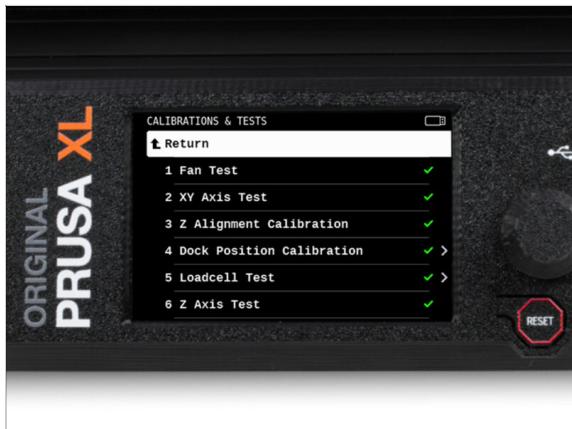

- ⓘ The wizard will test all important components of the printer. Some parts of the wizard require direct user interaction. Follow the instructions on the screen.
- ⚡ **WARNING: Do not touch the printer during the wizard unless prompted! Some parts of the printer may be HOT and moving at high speed.**
- ↗ The wizard starts with these tests:
 - ⚡ Fan test
 - ⚡ X-axis and Y-axis test
 - ⚡ Z-axis alignment calibration
- ⚡ These first tests are fully automatic during the first calibration.
- ⚡ **While testing the axes, make sure that there is nothing in the printer that is obstructing the movement of the axes.**

STEP 10 Wizard: Dock Position Calibration

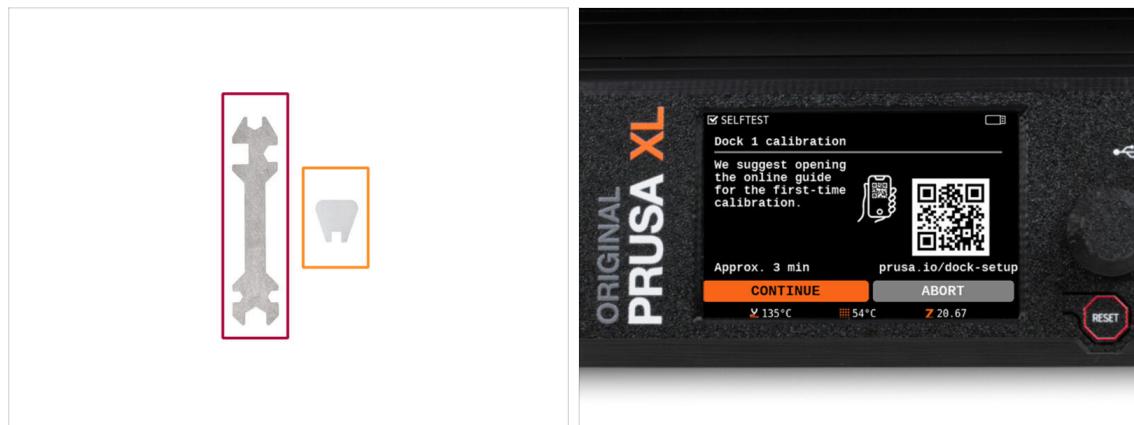

- ⓘ This test will require your input. The printer will guide you through properly calibrating the position of individual tool heads on the printer.
- ⚡ You will need:
 - ⚡ Universal wrench (1x)
 - ⚡ Mini wrench (1x)
- ⚡ It is necessary to follow every step in the dock calibration properly! **Do not rush, read every step twice, then proceed with the instruction.**

STEP 11 Wizard: Remove the dock pins




- ⚡ Follow the wizard instructions on the screen.
- ⚡ Using a Mini wrench, loosen and remove both dock pins on Dock 1. Set them aside, we will use them again soon.

STEP 12 Wizard: Loosen screws



- Follow the wizard instructions on the screen.
- Using a Uni wrench, loosen two screws. **A few turns are enough; do not remove the screws.**

STEP 13 Wizard: Lock the tool

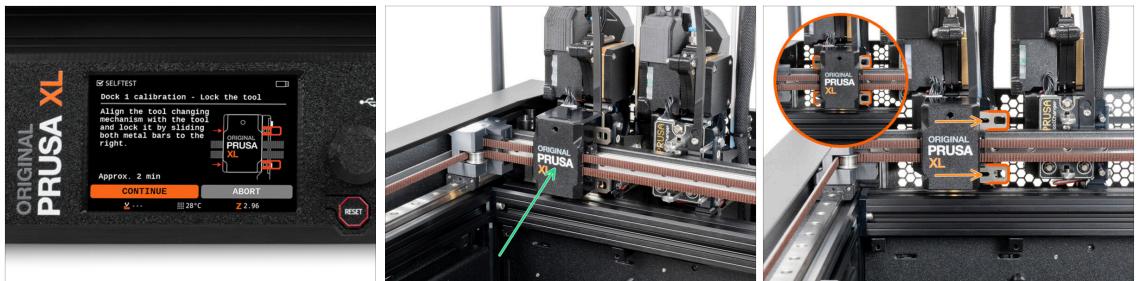

- Follow the wizard instructions on the screen.
- Slowly and carefully move the tool changing mechanism by hand to the first (leftmost) tool.
- Manually lock the metal bars as indicated in the picture.

⚠ The tool has to be locked in the tool changer.

STEP 14 Wizard: Tighten the upper screw



- Follow the wizard instructions on the screen.
- Using a Uni wrench, tighten the upper screw on a side of the dock.
- ⚠ After confirming by the continue button on the LCD, the XY axis will leave the dock with the tool. **Make sure that there are no obstacles in the way.**

STEP 15 Wizard: Tighten the lower screw




- Follow the wizard instructions on the screen.
- Using a Uni wrench, tighten the lower screw on a side of the dock.

STEP 16 Wizard: Install the dock pins



- Follow the wizard instructions on the screen.
- Insert the two metal pins and tighten them with a Mini wrench.
- After clicking on the continue button on the LCD, the printer will put the tool back into dock 1 and perform a few calibration moves.

STEP 17 Wizard: Dock successfully calibrated

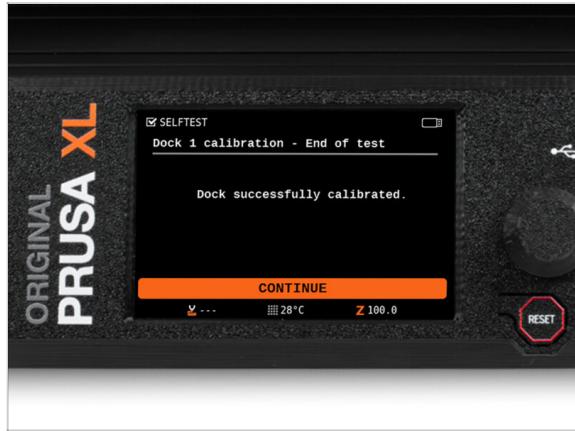

- Good job! Dock 1 is calibrated.
- After the Dock 1 calibration is successful, proceed to the Dock 2 calibration and repeat the steps.

STEP 18 Wizard: Test Loadcell




- ➊ The next step of the wizard will prompt you to touch the nozzle to test and calibrate the **Loadcell**. Parts of the printer are not heated during this test; you can touch the parts of the printer. Click on **Continue**.
- ➋ Do not touch the nozzle yet. Wait until the countdown finishes and the printer notifies you with a sound and display prompt.
- ➌ Tap the nozzle gently but firmly. Do not use excessive force. In case the loadcell does not detect your touch, you will be prompted to repeat the step.
- ➍ Repeat the loadcell test according to the number of print heads.
- ➎ After this step, proceed to the **Z Axis test** and the **Nozzle heater test** respectively. These two tests are automatic and require minimal input.

STEP 19 Wizard: Calibrate Filament Sensors




- ➊ The printer will ask if you would like to remap the third side filament sensor. Select **Left**. Change the side only in case you do not have enough space around the printer for the third spoolholder on the left side.
- ➋ During the calibration of the filament sensors, you will be prompted to use at least 130 cm of filament. Use the Prusament shipped with your printer and mount it on the spool holder.
- ➌ When you have prepared the filament, click on **Yes**.
- ➍ Wait for the printer to prompt you to insert the filament into the side filament sensor.

STEP 20 Wizard: Calibrate Filament Sensors

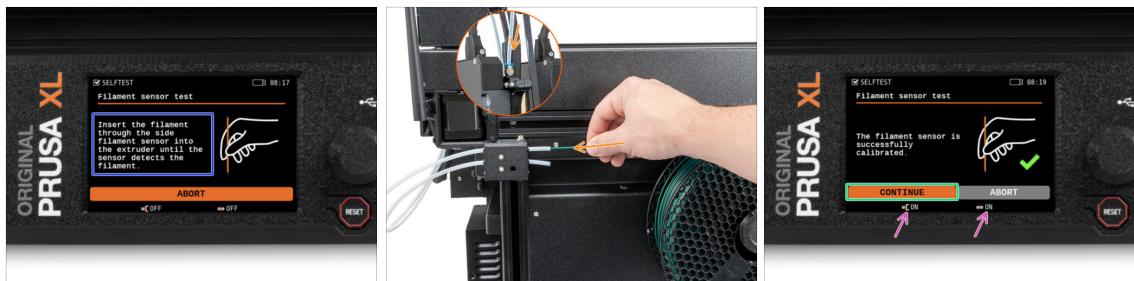

- ◆ Insert the filament into the side filament sensor through the PTFE tube. Push it in until it reaches the filament sensor in the extruder (you will feel a slight resistance).
- ◆ You can check the side filament sensor (left) and extruder filament sensor (right) status on the bottom bar on the screen.
- ◆ At the end of the test, you will be prompted to **remove the filament from the sensor**.
- ① According to the number of print heads, repeat the filament sensor calibration process.
- ◆ Once all five filament sensors are successfully calibrated and tested, the printer will move on to the tool offset calibration. This will require your input. Move on to the next step →


STEP 21 Calibration pin: parts preparing

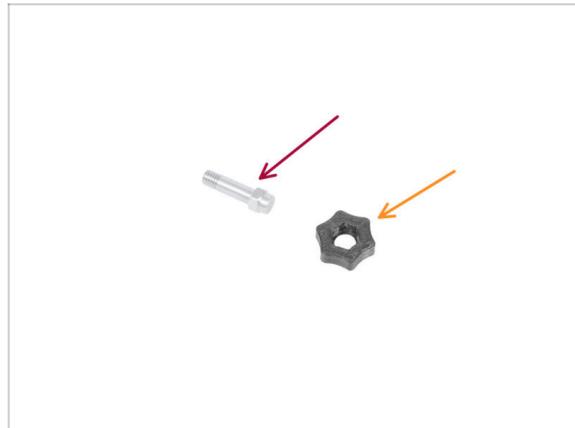

- ◆ For the next step, please prepare:

- ◆ Calibration pin (1x)
- ◆ Calibration-pin-key (1x)

STEP 22 Calibration pin: parts assembly

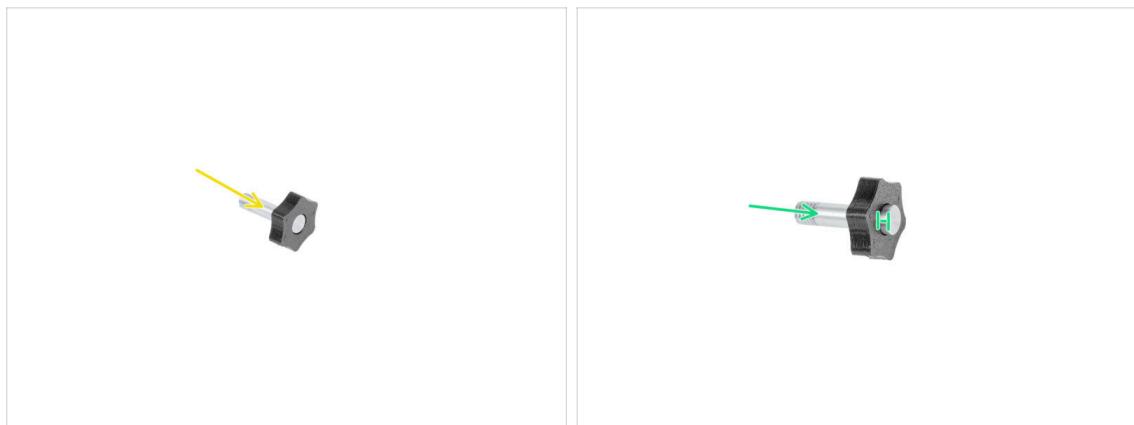

- ◆ Insert the calibration pin into the plastic part.
- ◆ Push the pin into the plastic part, creating a small protrusion on top.
- ◆ Well done, the pin is prepared.

STEP 23 Wizard: Tool Offset Calibration



- ◆ During offset calibration, you will need to screw the calibration pin into the center of the heatbed.
- ◆ Have the calibration pin ready.
- ◆ Click on **Continue** to start the Tool Offsets Calibration.
- ◆ Only when you are re-doing the calibration at a later point do the nozzles have to be properly cleaned. **The second screen does not apply to the initial calibration. Click on continue.**

STEP 24 Wizard: Sheet install



- ◆ Follow the wizard instructions on the screen.
- ◆ If you do not already have the print sheet on the heatbed, follow the instructions and place the print sheet on the heatbed.

i Once the print sheet is in place, the printer starts short calibration.


STEP 25 Wizard: Calibration pin installation



- ◆ Follow the wizard instructions on the screen.
- ◆ The wizard will remind you that for this calibration, the nozzles and parking plate have to be clean. It is assumed that they are for the first calibration, and you can click on **Continue**.
- ◆ Remove the print sheet from the heatbed.
- ◆ Install the calibration pin into the middle of the heatbed. Turn the pin clockwise gently and without excessive force, until it is completely screwed in. **Then remove the plastic calibration-pin-key from the calibration pin.**

i The printer will now calibrate both tool heads.

STEP 26 Wizard: Offset calibration done

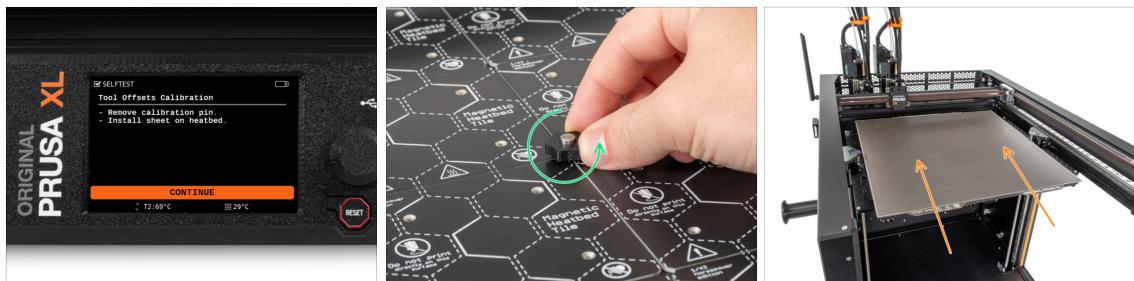

- ◆ Follow the wizard instructions on the screen.
- ◆ Once prompted, reattach the plastic calibration-pin-key to loosen the calibration pin. Rotate it counterclockwise and remove it from the heatbed.
- ◆ Place the print sheet onto the heatbed.
- ⓘ The printer will finish the calibration.
- ◆ Good job! The offset calibration is done.

STEP 27 Calibration pin




- ◆ Insert the calibration pin into the side filament sensor.
- ◆ After the offset calibration is completed, **the printer will automatically initiate the heatbed heater check.**
- ⓘ The heatbed doesn't reach its maximum temperature (115°C) during the heatbed heater test. The aim is to check the heating speed.

STEP 28 Wizard: Phase stepping



- ◆ The last step is the phase stepping calibration. This feature was introduced in firmware version 6.0.0. The calibration is automatic. Follow the instructions on the screen.
- ① You can find more information about the phase stepping via the following links:
 - 👉 **PHASE STEPPING GUIDE**: Necessary information about the phase stepping calibration.
 - 👉 **PHASE STEPPING BLOG ARTICLE**: A more in-depth look at the phase stepping feature.
- ① The printer will move the first print head to the middle of the heatbed and move the tool diagonally for the X and Y axes at different speeds.
- ◆ After the printer completes the test, the screen will show by how much the motor vibrations were reduced.

STEP 29 It's done

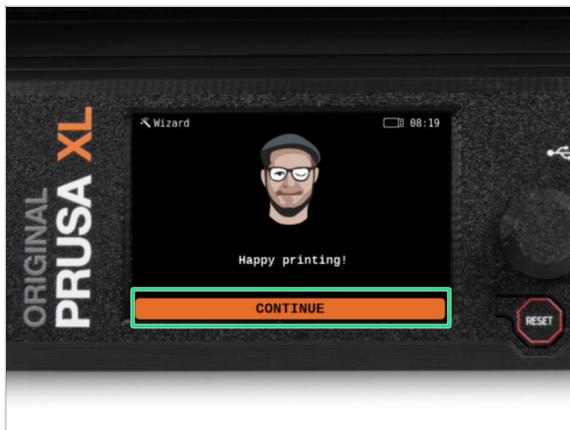

- ◆ Well done! The printer is ready to print. However, please follow the instructions in this manual to the end.

STEP 30 Prusa Nextruder sock (Optional)



- ⓘ The nextruder sock helps to keep the temperature in the heater block stable. It also keeps your hotend clean from filament dirt and protects it in case the print detaches from the print surface.
- ⓘ A silicone sock is supplied with each Nextruder package.
- ⚡ If you want to install the sock, we recommend doing it after the calibration.
- ⓘ How to install the sock - [check the article](#).

STEP 31 Regular printer maintenance



- ⓘ To keep your printer working properly over time, it is highly recommended to do regular maintenance.
- ⚡ For regular printer maintenance, follow the [Regular printer maintenance \(XL\)](#) article for information and instructions.
- ⌚ On multi-tool printers, it is necessary to focus on lubricating the coupler pins of the ToolHeads.
 - ⓘ Lubricating the coupler pins can be made along with the rest of the maintenance, or it can also be done if you notice that your prints have banding or ringing issues.
 - ⓘ To lubricate the coupler pins use our dedicated online guide [How to lubricate the coupler pins on Original Prusa XL](#).
 - ⓘ You will need to print an applicator to lubricate the pins. Refer to the dedicated guide for more information.

STEP 32 Quick guide for your first prints




Now, please read the **3D Printing Handbook**, which is tailor-made for your printer and **follow the instructions to set up the printer properly**. The latest version is always available at [this link](#).




Read the chapters *Disclaimer* and *Safety instructions*.

STEP 33 Printable 3D models

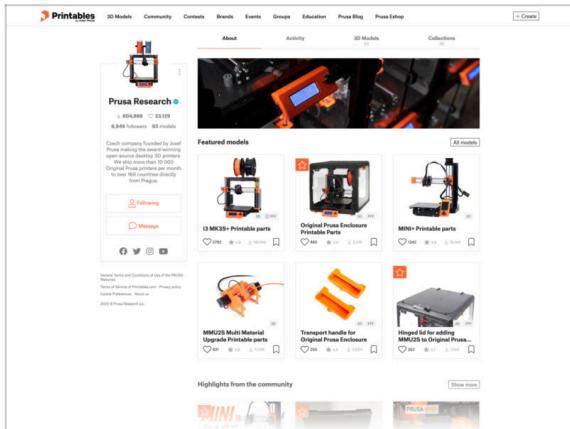


- **Congratulations! You should be ready to print by now ;-)**
- You can start by printing some of our test objects bundled on the included USB stick - you can check them out [Printables](#).

STEP 34 Give us feedback

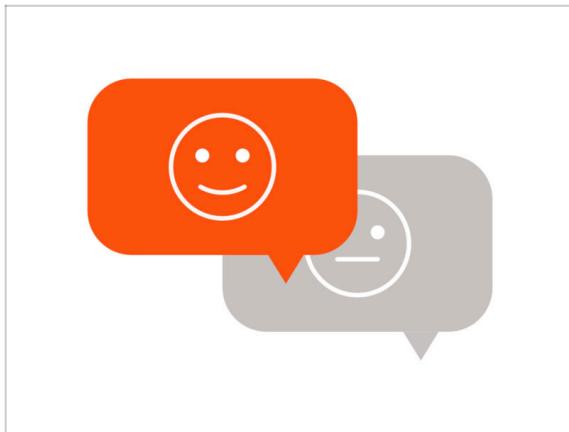


- We know you're eager to start printing, but we'd really appreciate it if you could take 3-4 minutes to **share your thoughts** on this manual: how clear it was, how easy it was to follow, and any ideas to improve it.
- **i** This feedback is a little different from the usual comments you might leave on individual steps.
- **Share your feedback here.**
- Thank you for helping us make our manuals even better!

STEP 35 Prusa knowledge base

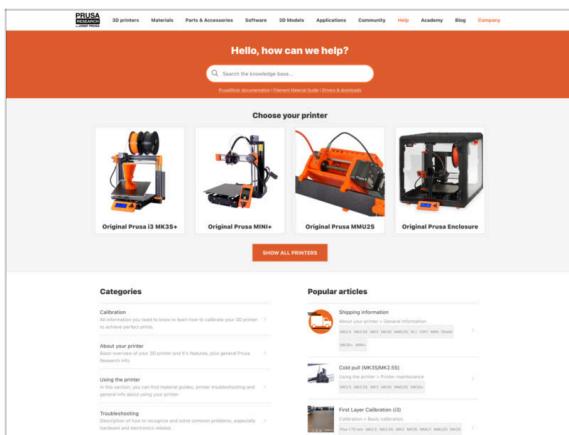


- If you encounter any problems at all, don't forget you can always check out our knowledge base at help.prusa3d.com
- We're adding new topics every day!

STEP 36 Join Printables!

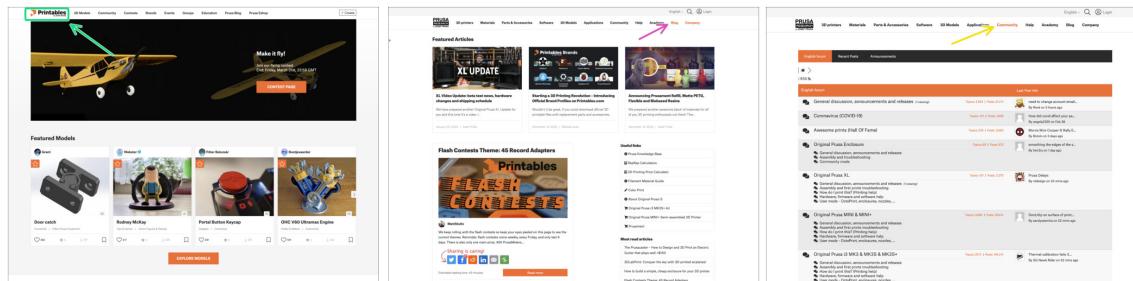


- ◆ **Don't forget to join the biggest Prusa community! Download the latest models in STL or G-code tailored for your printer. Register at [Printables.com](https://printables.com)**
- ◆ **Looking for inspiration on new projects? Check our blog for weekly updates.**
- ◆ **If you need help with the build, check out our forum with a great community :-)**
- ① **All services share one account.**

STEP 37 Haribo time!

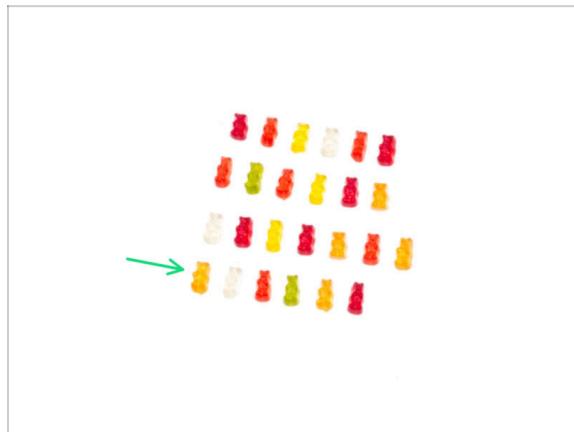


- ◆ **Congratulations! You did it.** The printer should already be up and running, and you can enjoy the last row of gummy bears: six gummy bears.
- ① **Disclaimer:** You have a lot of gummy bears left. **Do not eat all the leftover gummy bears all at once by yourself now!** As much as it sounds like it could be fun, trust us... You do not want to **bear** the consequences.
 - ◆ We recommend re-sealing the bag and placing it near the printer, so you can have a few anytime your printer is heating up, or you are eagerly waiting for your project to finish printing.
- ① Did you know that gummy bears have a long shelf life? Typically lasting for up to two years if stored properly in a cool and dry place. But do not test that with our gummy bears.

Manual changelog XL Dual-Head (Assembled)

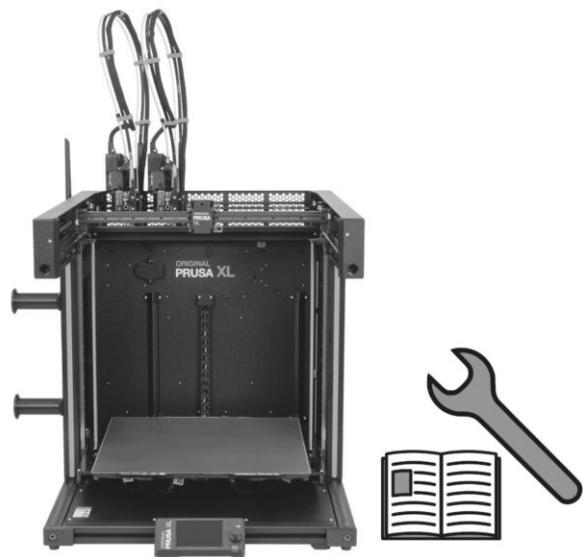


STEP 1 Version history

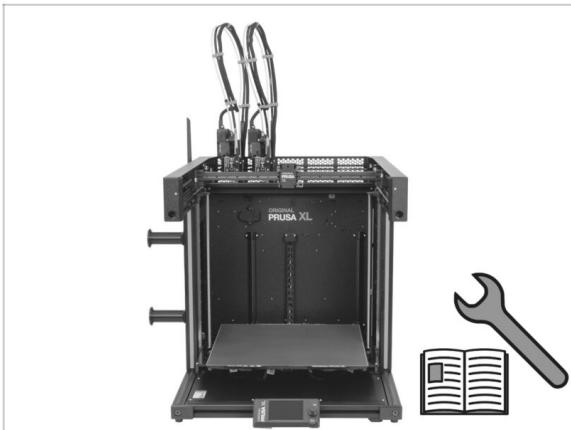

- **Versions of the Original Prusa XL semi-assembled (single tool) manual:**
- 06/2023 - Initial version 1.00
- 07/2023 - Updated to version 1.02
- 08/2023 - Updated to version 1.03
- 11/2023 - Updated to version 1.04
- 05/2024 - Updated to version 1.05
- 09/2024 - Updated to version 1.06
- 04/2025 - Updated to version 1.07


STEP 2 Changes to the manual (1)

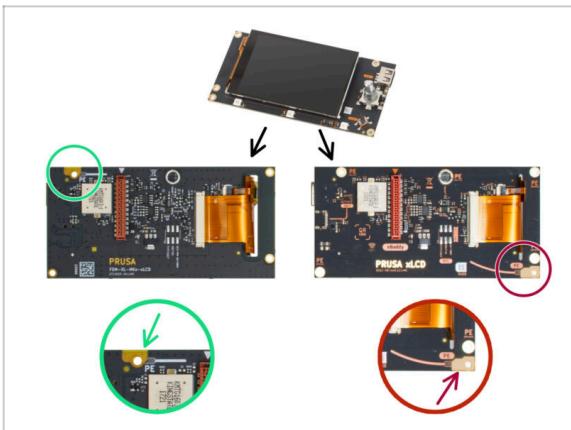

- 07/2023 - xLCD assembly
 - Added instructions for the new xLCD.

● **Manual version 1.01**


STEP 3 Changes to the manual (2)

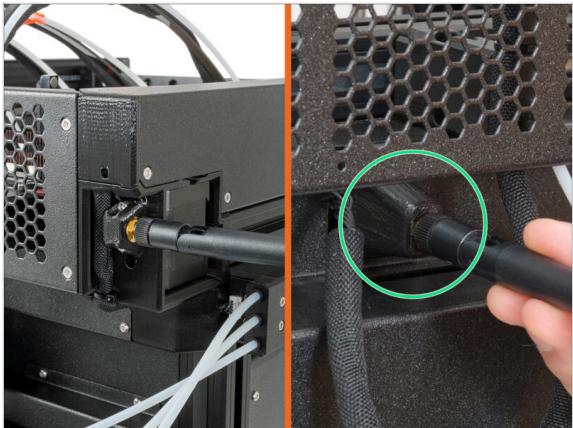

- 08/2023 - Antenna adapter
- Added instructions for the new antenna adapter.

Manual version 1.02

STEP 4 Changes to the manual (3)

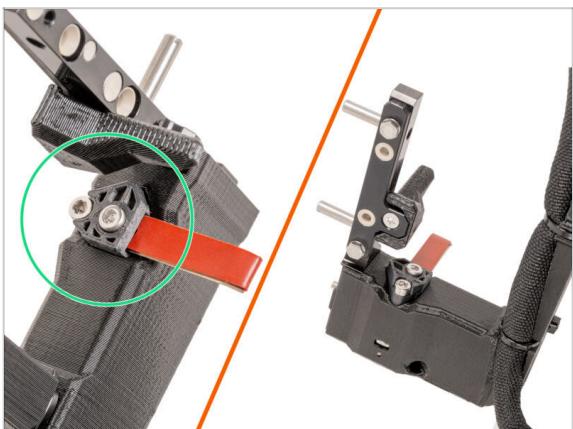

- 08/2023 - Nextruder dock
- Added instructions for the new dock.


Manual version 1.03

STEP 5 Changes to the manual (4)



- 11/2023 - Spoolholder
 - Added instructions for the new injection molded Spoolholder.
- Manual version 1.04

STEP 6 Changes to the manual (5)

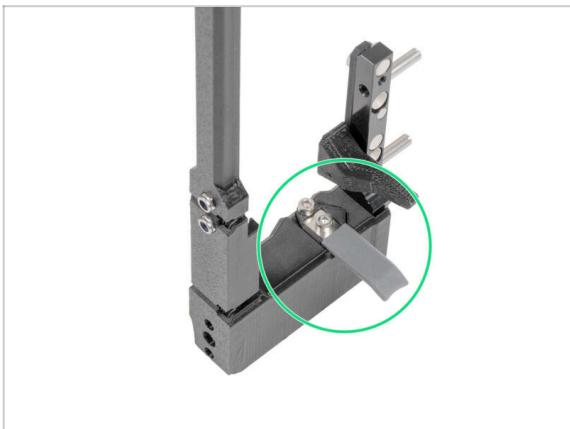

- 05/2024
 - Added information about the new gray nozzle seal.
- Manual version 1.05

STEP 7 Changes to the manual (6)



- 09/2024 - xLCD
 - Added instructions for the new injection molded xLCD.
- Manual version 1.06

STEP 8 Changes to the manual (7)



- 04/2025 - Main cable connector cover
 - Added instructions for the new main cable connector cover.
- Manual version 1.07

Notes:

Notes:

Notes:

Notes:

